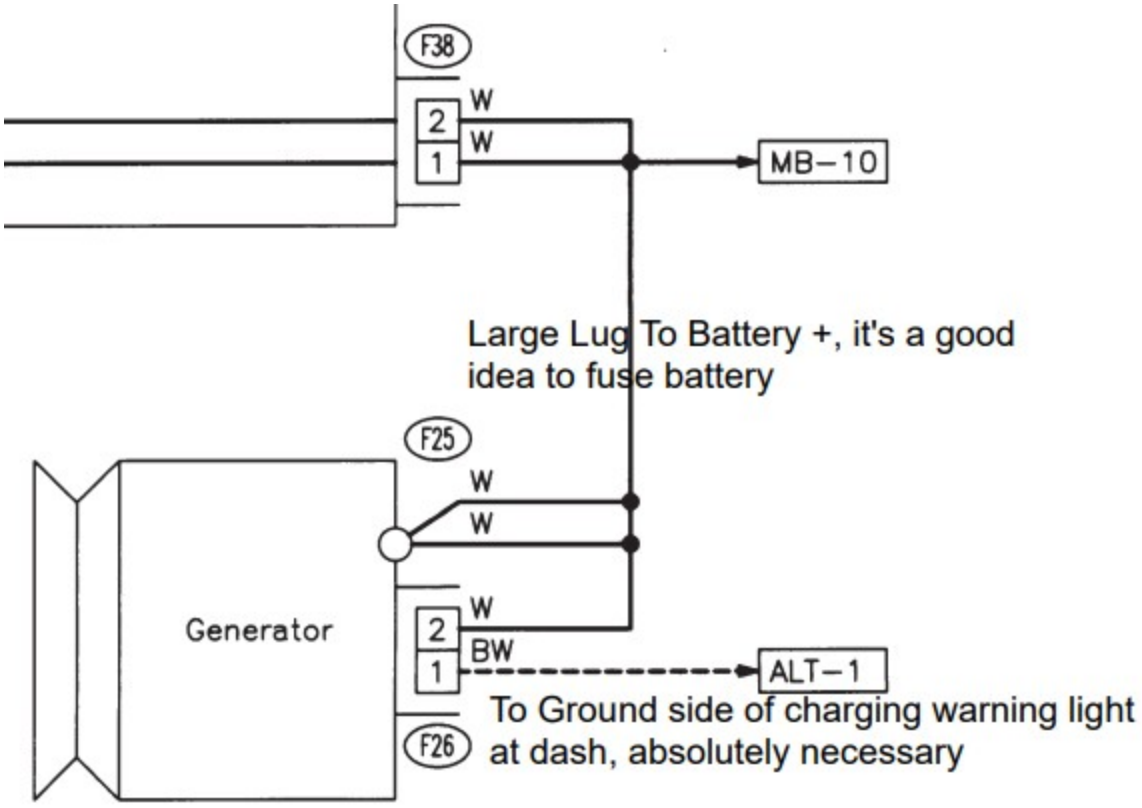

F38
2
1
W
W
MB–10
Large Lug To Battery +, it's a good idea to fuse battery
F25
W
W
Generator
2
1
W
BW
ALT–1
To Ground side of charging warning light at dash, absolutely necessary
F26