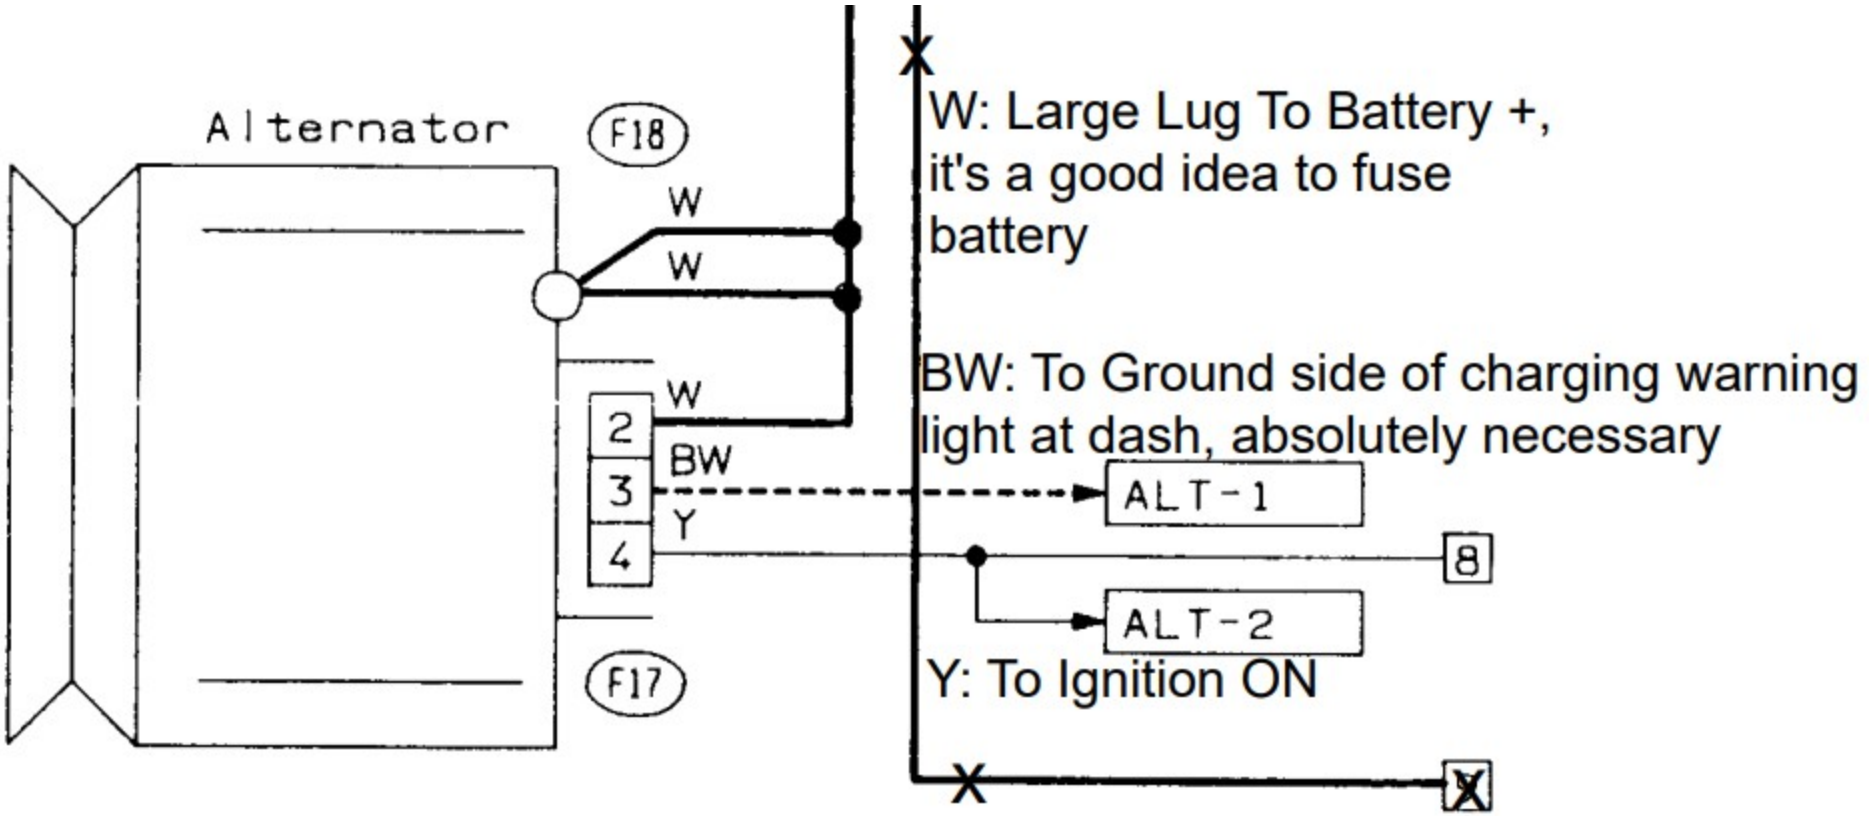

Alternator
F18
W
W
W
2
BW
3
Y
4
F17
ALT-1
8
ALT-2
W: Large Lug To Battery +,
it's a good idea to fuse
battery
BW: To Ground side of charging warning
light at dash, absolutely necessary
Y: To Ignition ON