


F: A/T CONTROL SYSTEM

1. LHD 2200 cc ENGINE MODEL

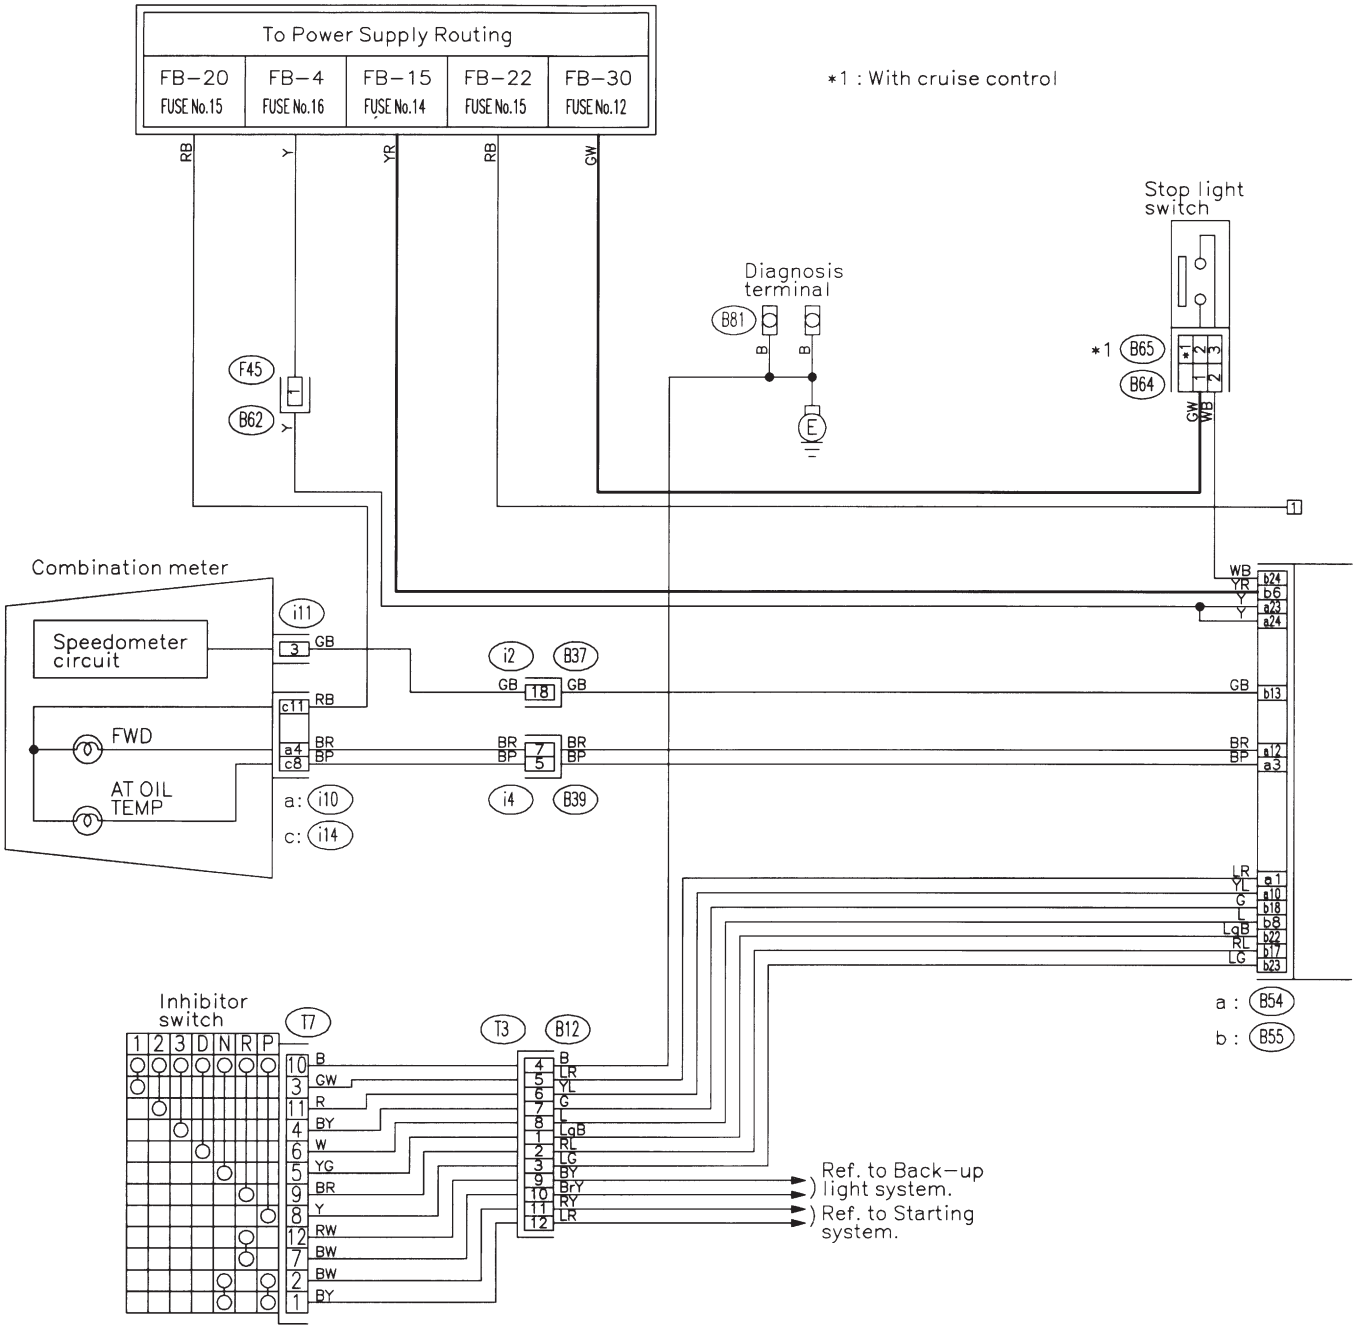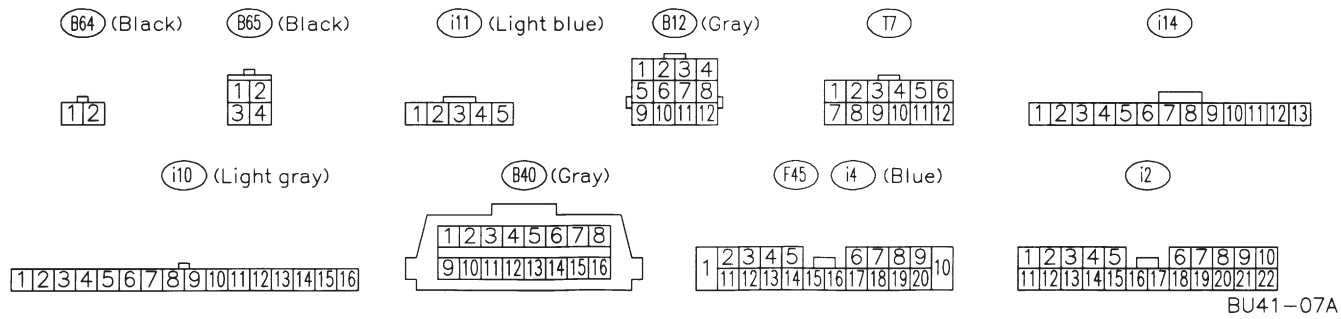


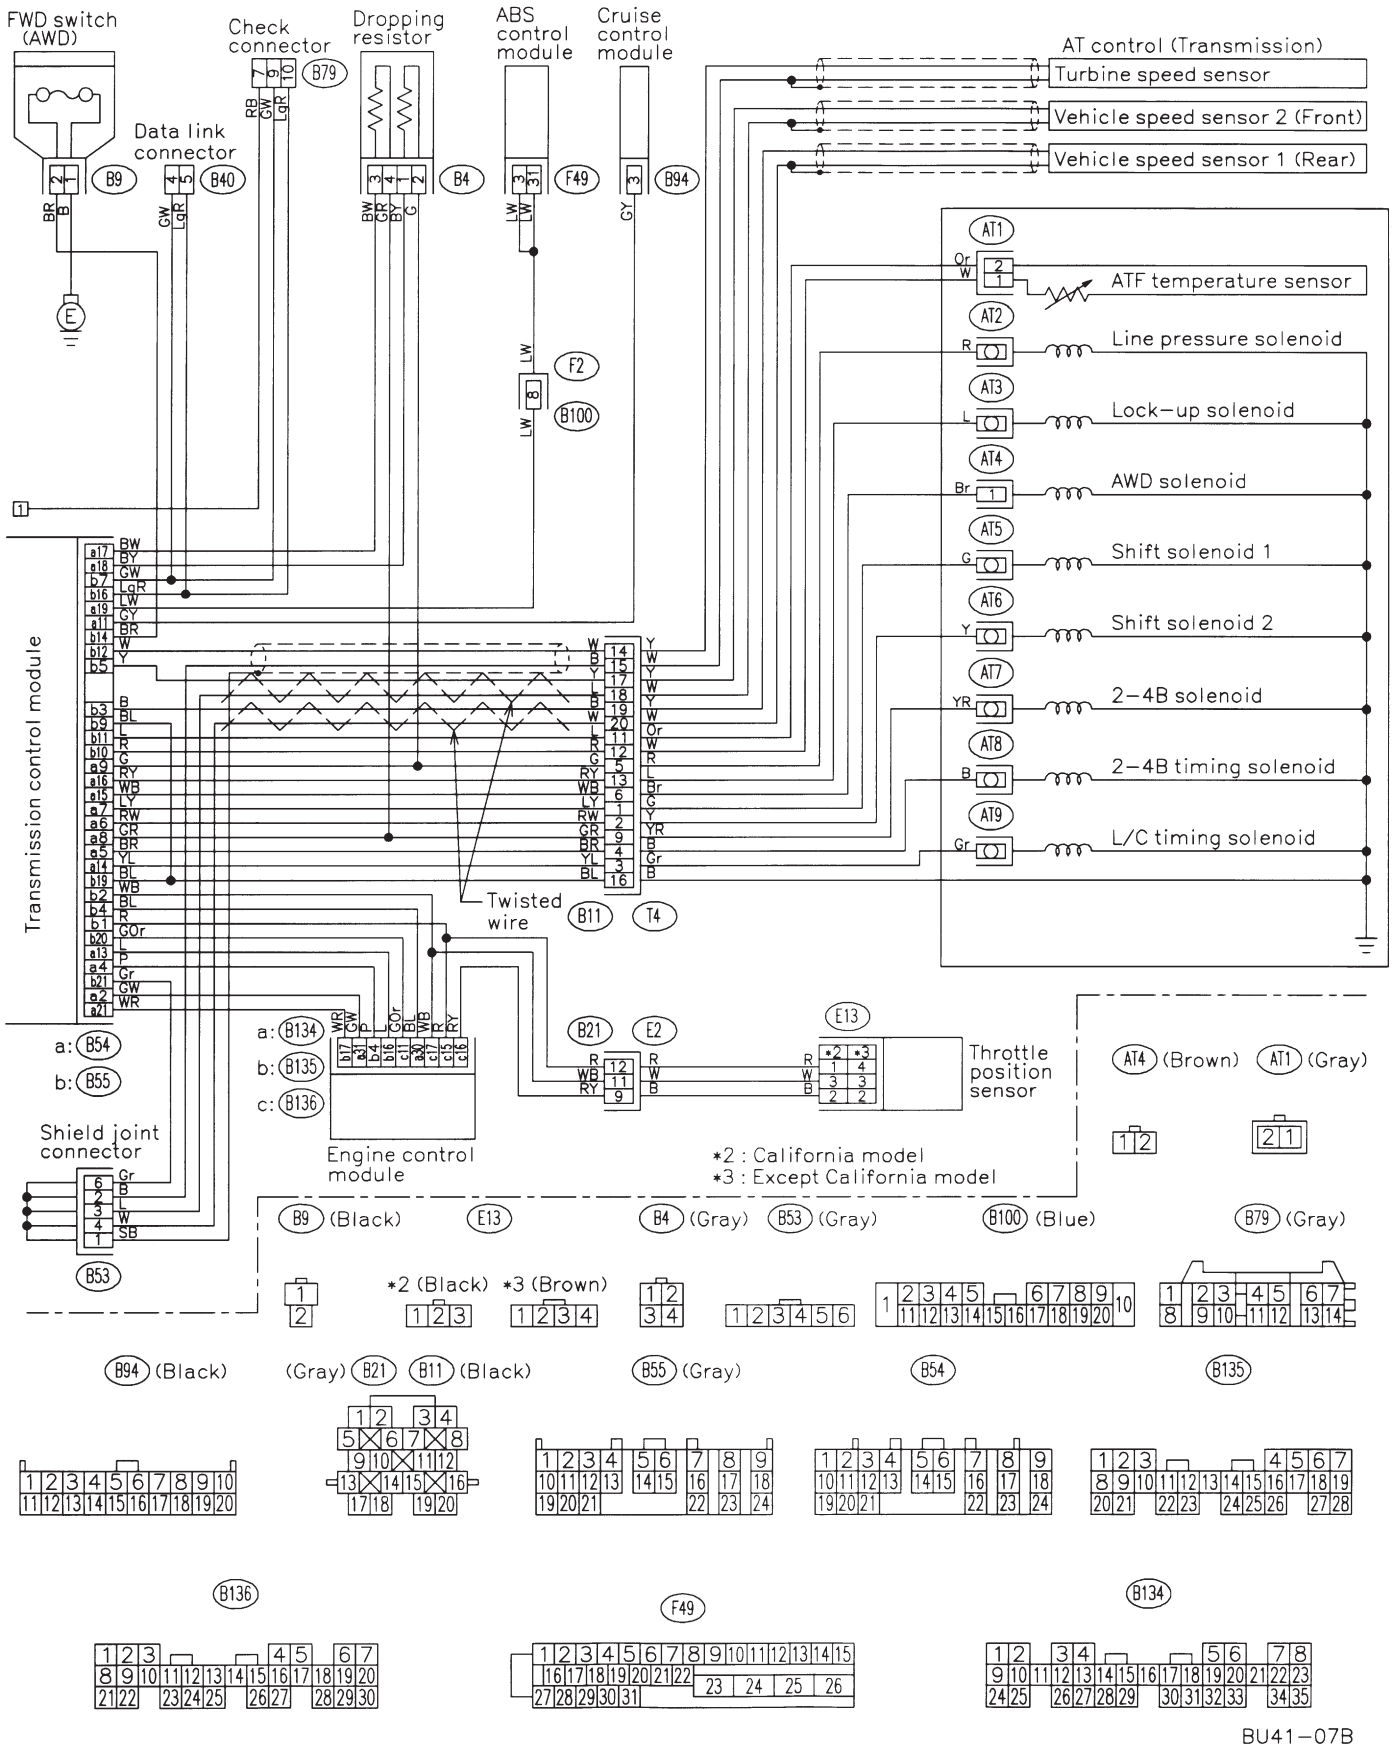


BU41−07A



FWD switch (AWD)
Check connector
Dropping resistor
ABS control module
Cruise control module
AT control (Transmission)
Turbine speed sensor
Vehicle speed sensor 2 (Front)
Vehicle speed sensor 1 (Rear)
Data link connector
ATF temperature sensor
Line pressure solenoid
Lock−up solenoid
AWD solenoid
Shift solenoid 1
Shift solenoid 2
2−4B solenoid
2−4B timing solenoid
L/C timing solenoid
Transmission control module
Twisted wire
Throttle position sensor
Shield joint connector
Engine control module
*2 : California model
*3 : Except California model
(Black)
(Gray)
(Blue)
(Brown)
BU41−07B


2. LHD 2500 cc ENGINE MODEL

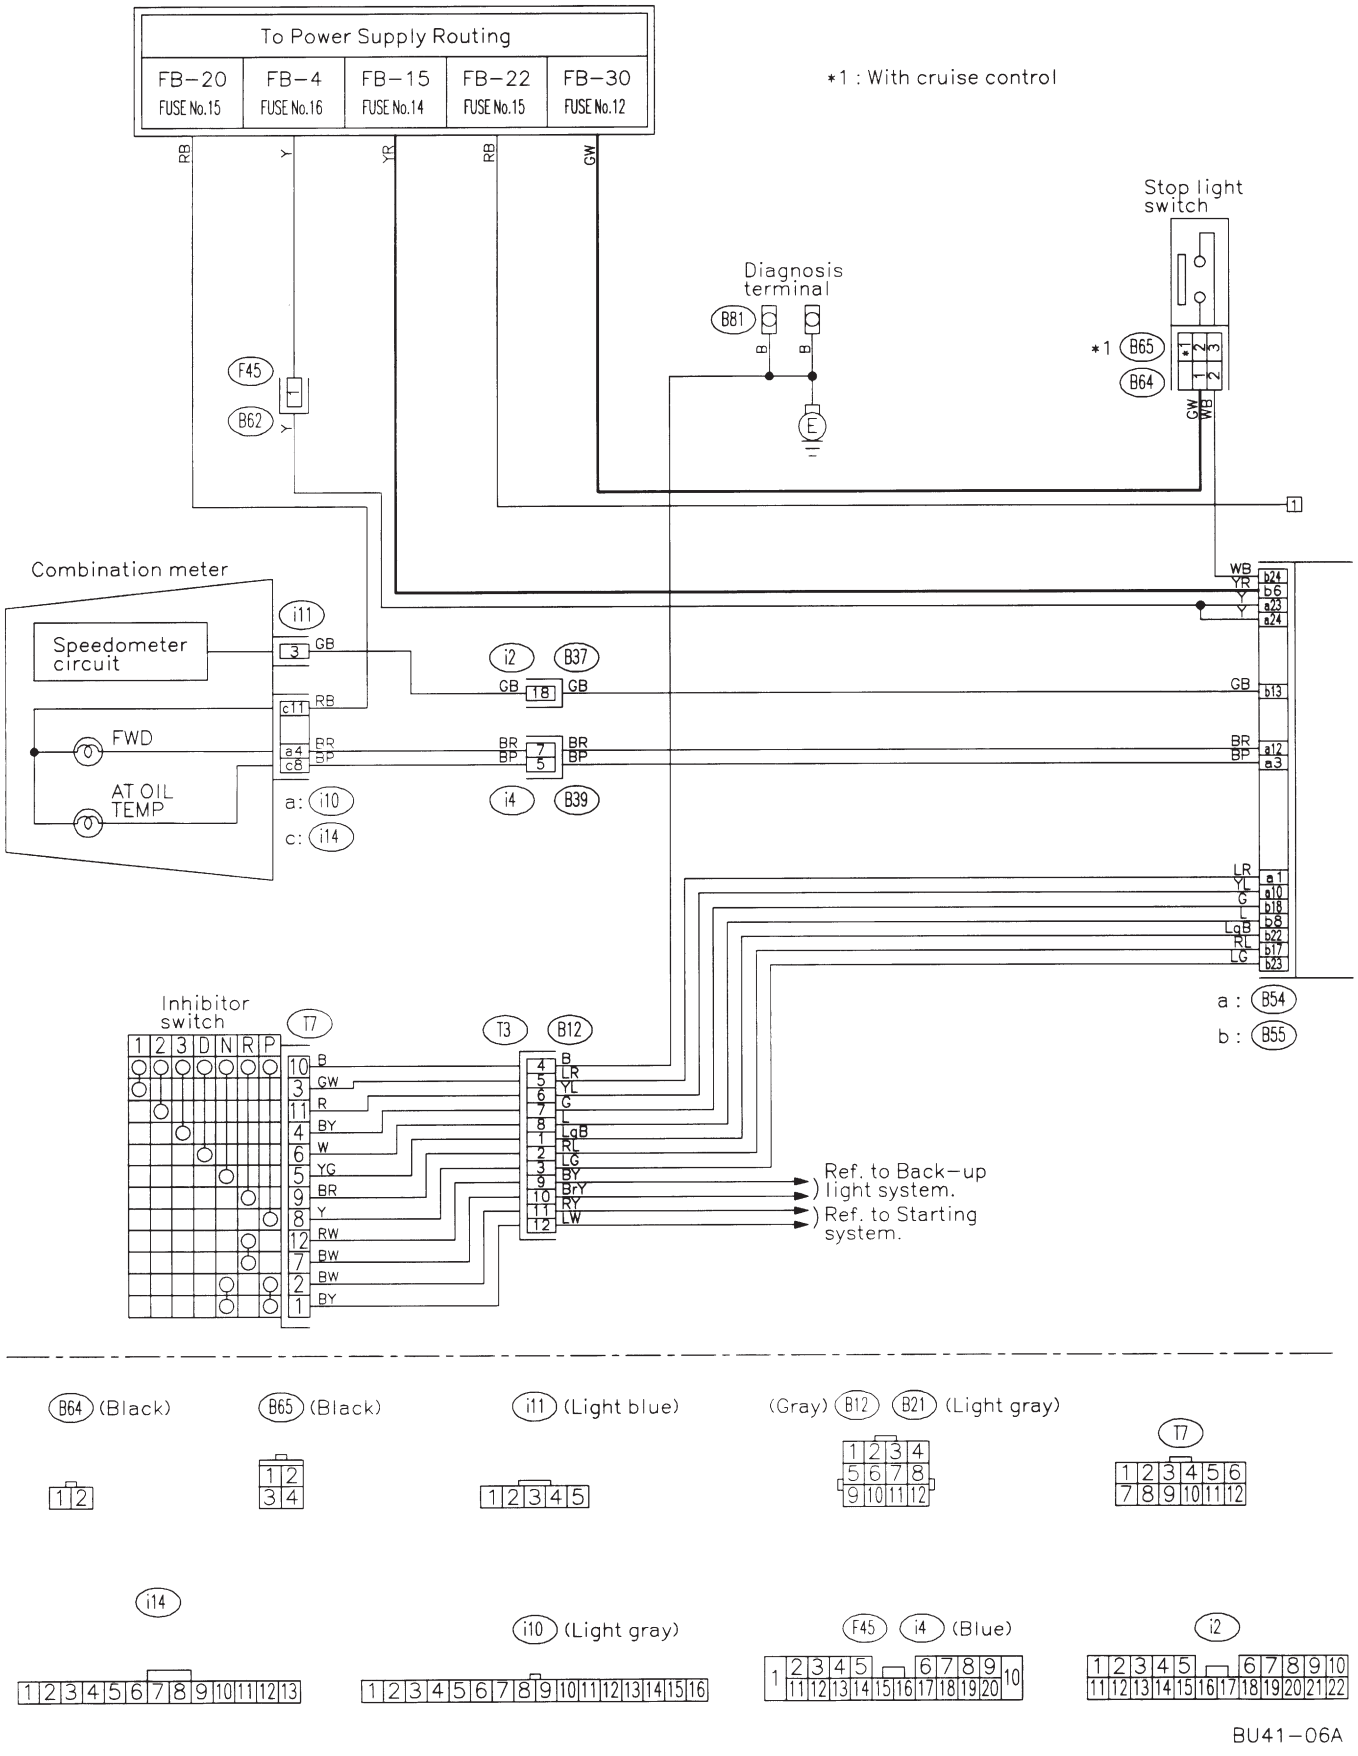

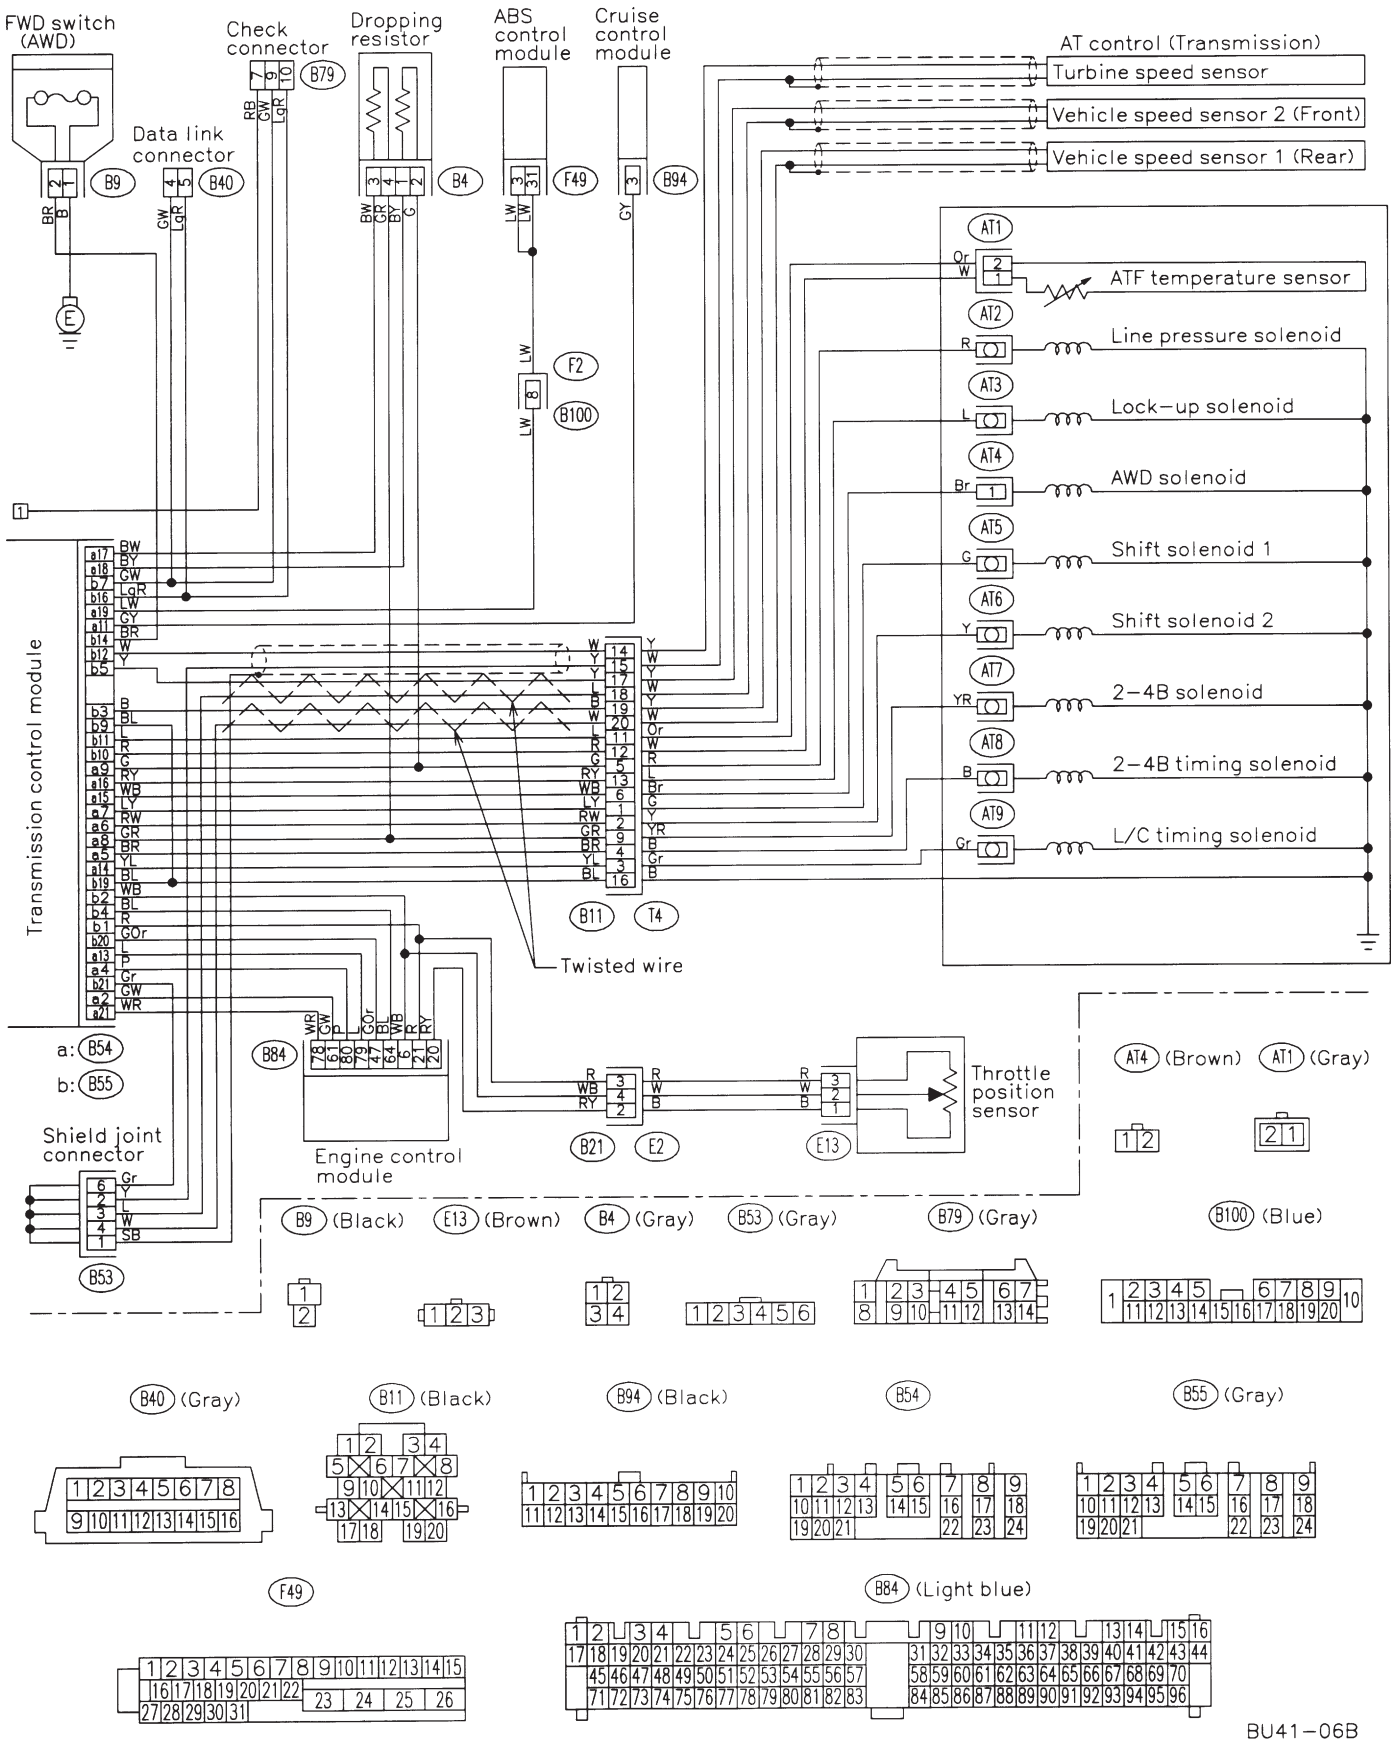
FWD switch (AWD)
Check connector
Dropping resistor
ABS control module
Cruise control module
AT control (Transmission)
Turbine speed sensor
Vehicle speed sensor 2 (Front)
Vehicle speed sensor 1 (Rear)
Data link connector
ATF temperature sensor
Line pressure solenoid
Lock−up solenoid
AWD solenoid
Shift solenoid 1
Shift solenoid 2
2−4B solenoid
2−4B timing solenoid
L/C timing solenoid
Transmission control module
Twisted wire
Throttle position sensor
Shield joint connector
Engine control module
a: B54
b: B55
B9 (Black)
E13 (Brown)
B4 (Gray)
B53 (Gray)
B79 (Gray)
B100 (Blue)
AT4 (Brown)
AT1 (Gray)
B40 (Gray)
B11 (Black)
B94 (Black)
B54
B55 (Gray)
F49
B84 (Light blue)
BU41−06B

3. RHD MODEL

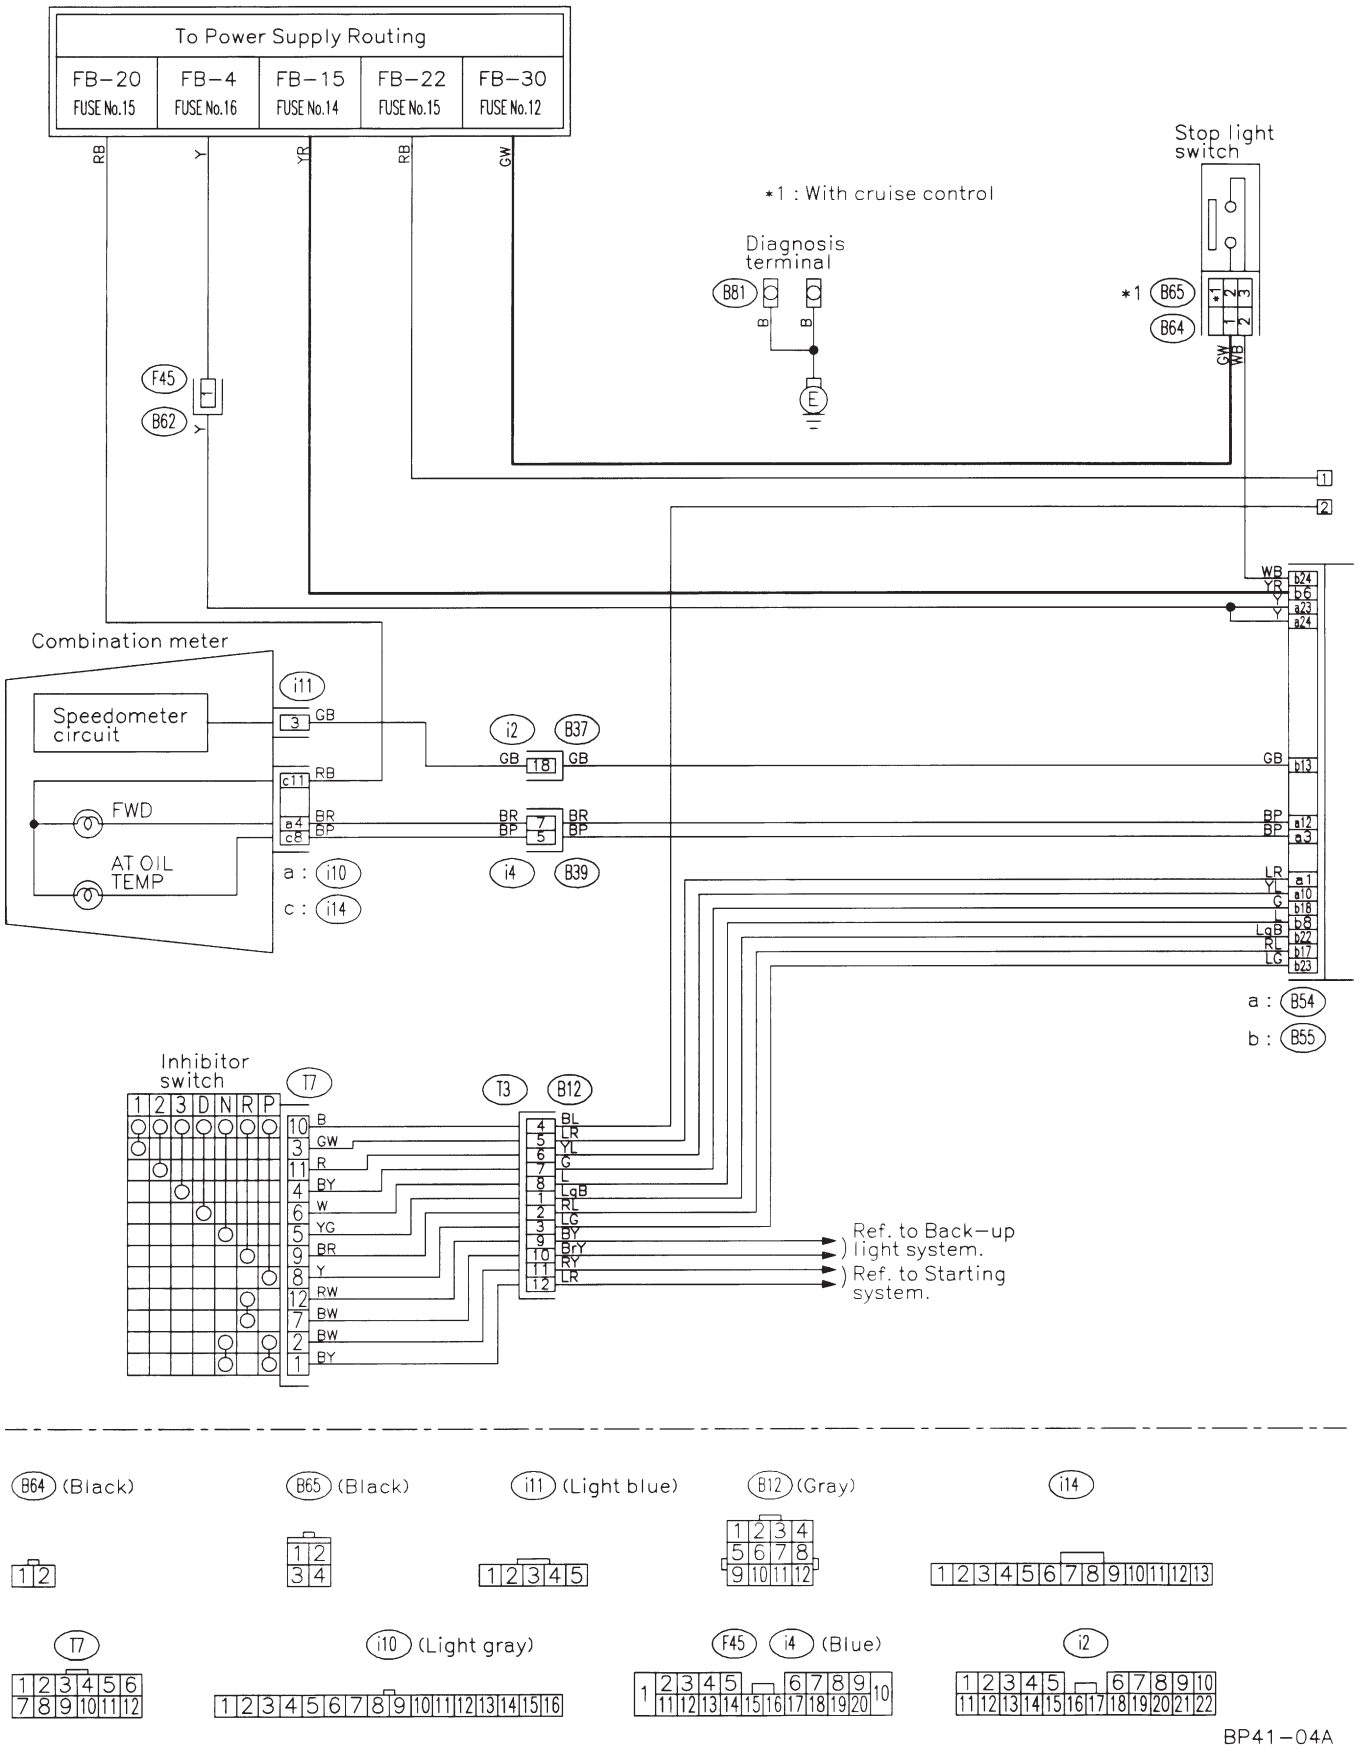
To Power Supply Routing
FB−20 FUSE No.15
FB−4 FUSE No.16
FB−15 FUSE No.14
FB−22 FUSE No.15
FB−30 FUSE No.12
*1 : With cruise control
Stop light switch
Diagnosis terminal
Combination meter
Speedometer circuit
FWD
AT OIL TEMP
Inhibitor switch
Ref. to Back−up light system.
Ref. to Starting system.
(B64) (Black)
(B65) (Black)
(i11) (Light blue)
(B12) (Gray)
(i14)
(T7)
(i10) (Light gray)
(F45) (i4) (Blue)
(i2)
BP41−04A

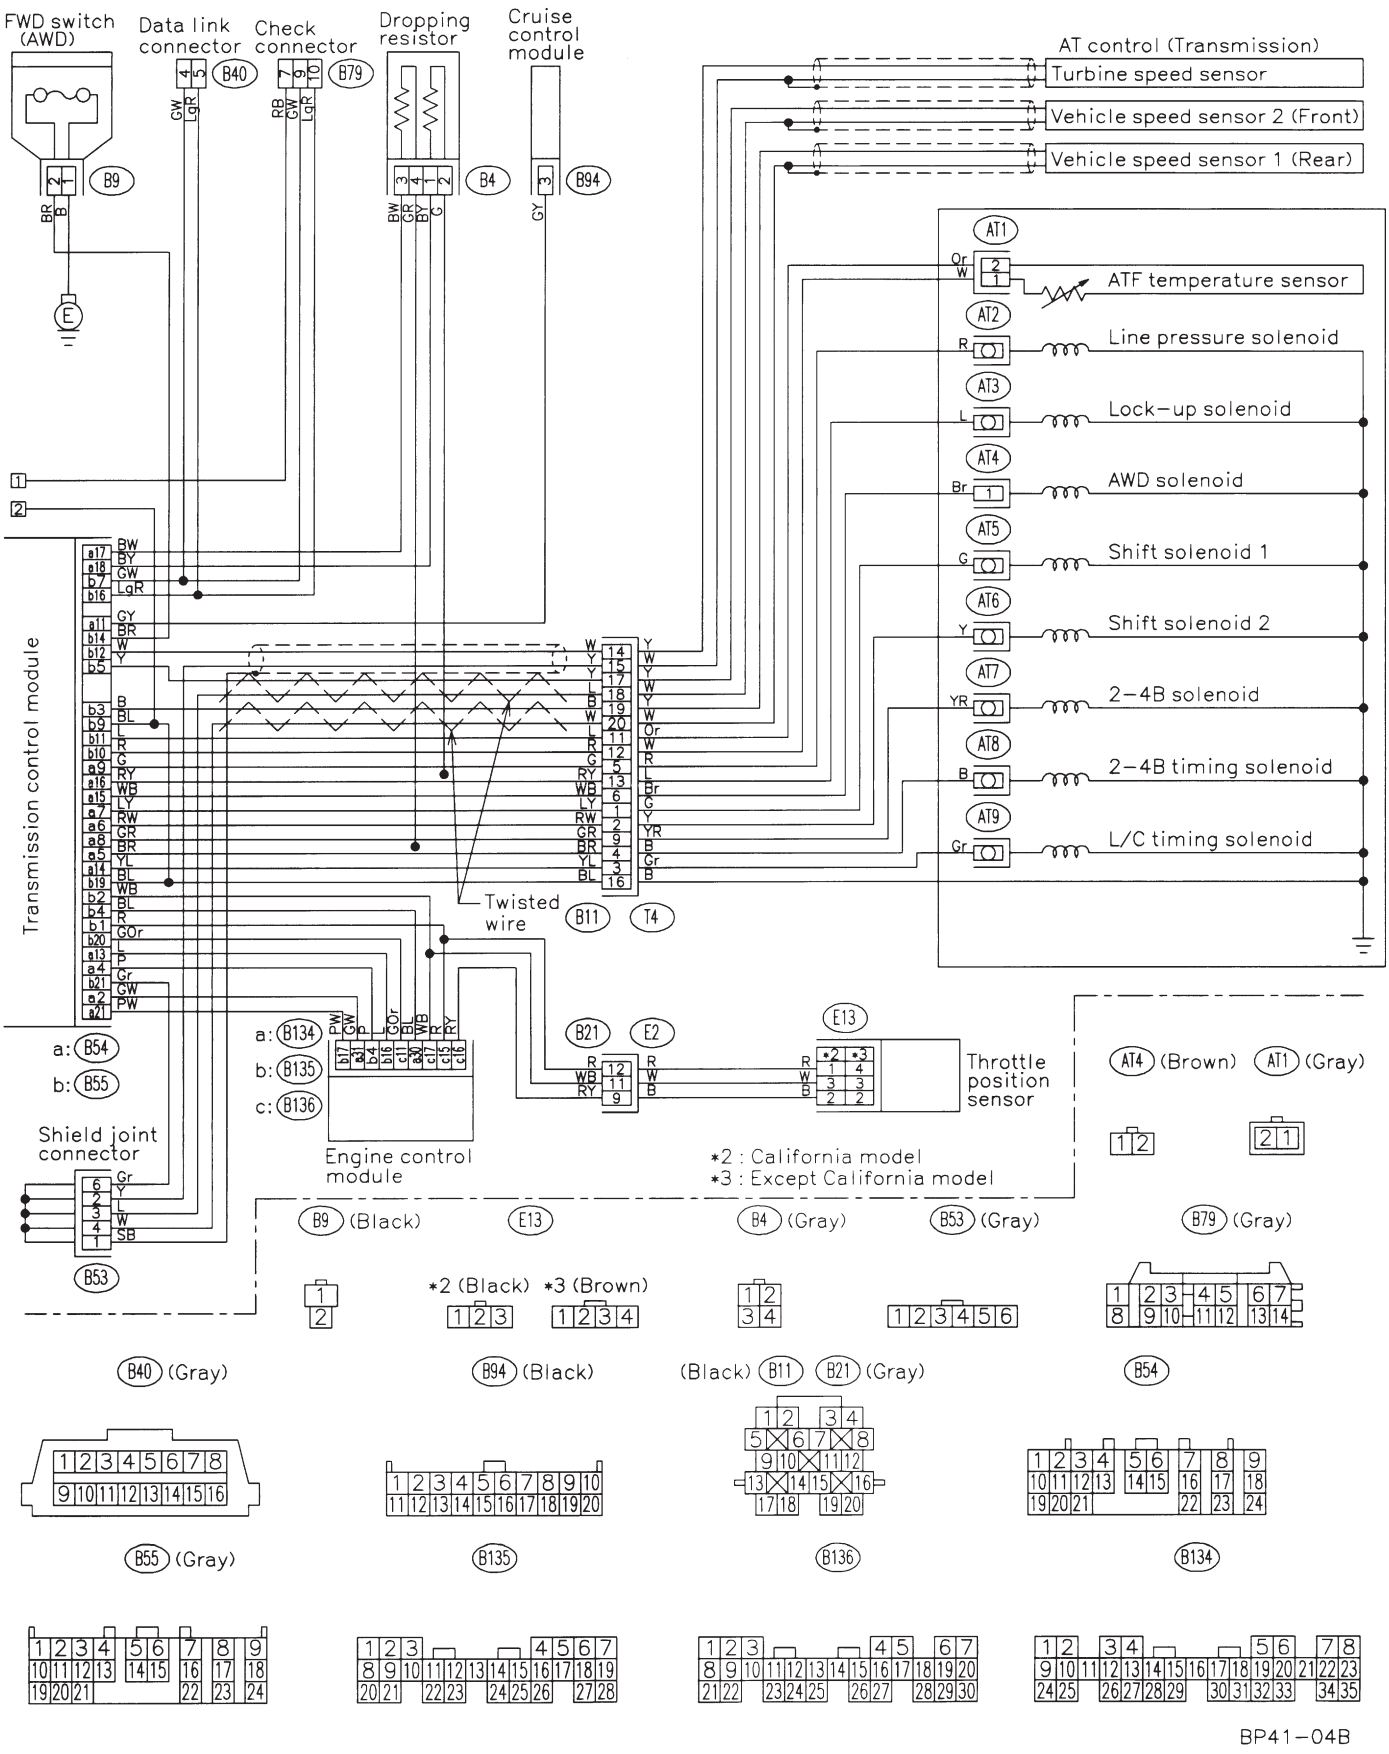
FWD switch (AWD)
Data link connector
Check connector
Dropping resistor
Cruise control module
AT control (Transmission)
Turbine speed sensor
Vehicle speed sensor 2 (Front)
Vehicle speed sensor 1 (Rear)
ATF temperature sensor
Line pressure solenoid
Lock−up solenoid
AWD solenoid
Shift solenoid 1
Shift solenoid 2
2−4B solenoid
2−4B timing solenoid
L/C timing solenoid
Transmission control module
Twisted wire
Shield joint connector
Engine control module
Throttle position sensor
*2 : California model
*3 : Except California model
(Brown)
(Gray)
(Black)
(Gray)
(Gray)
(Gray)
(Black)
(Black)
(Gray)
(Gray)
(Gray)
(Gray)

BP41−04B