


1. TURBO ENGINE MODEL

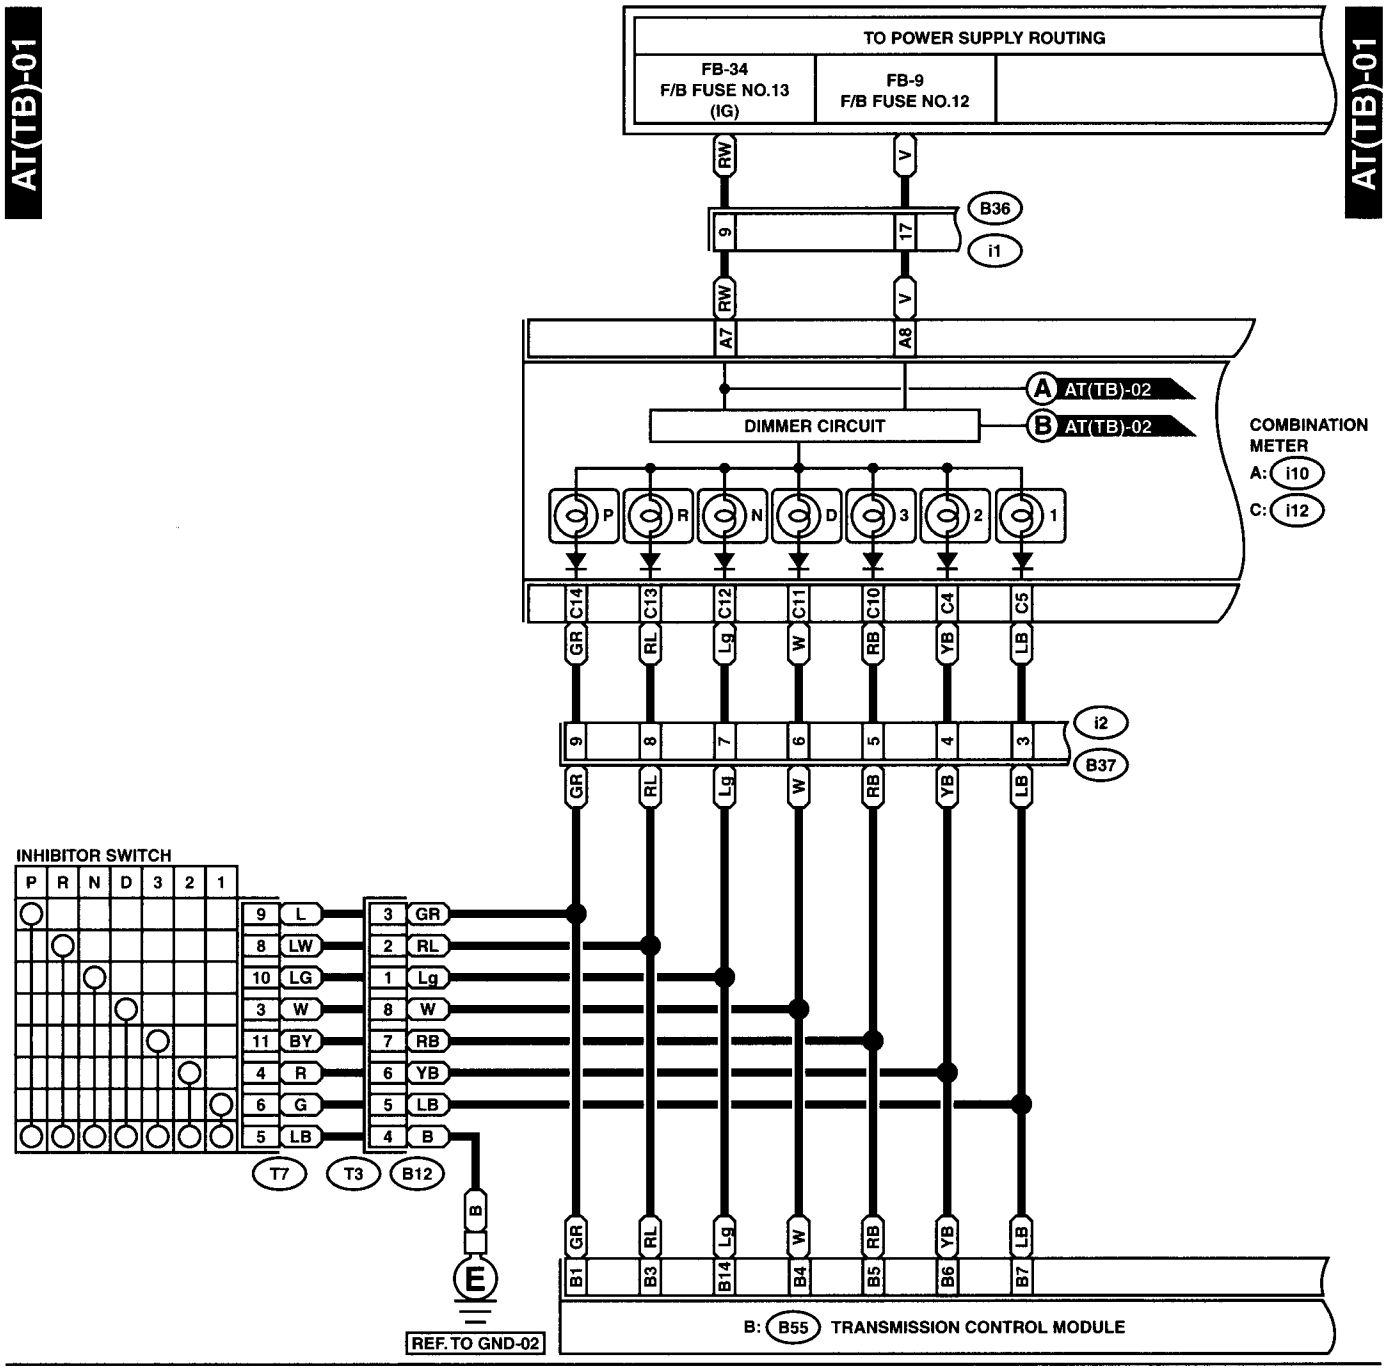


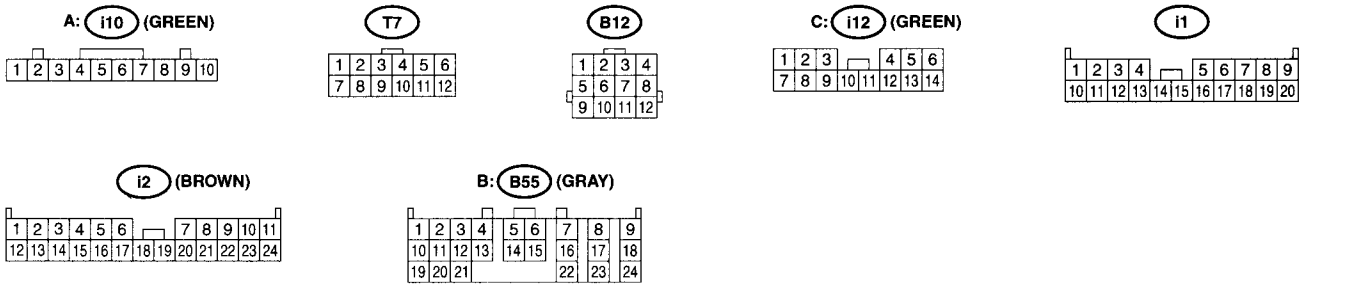


GU41-20A

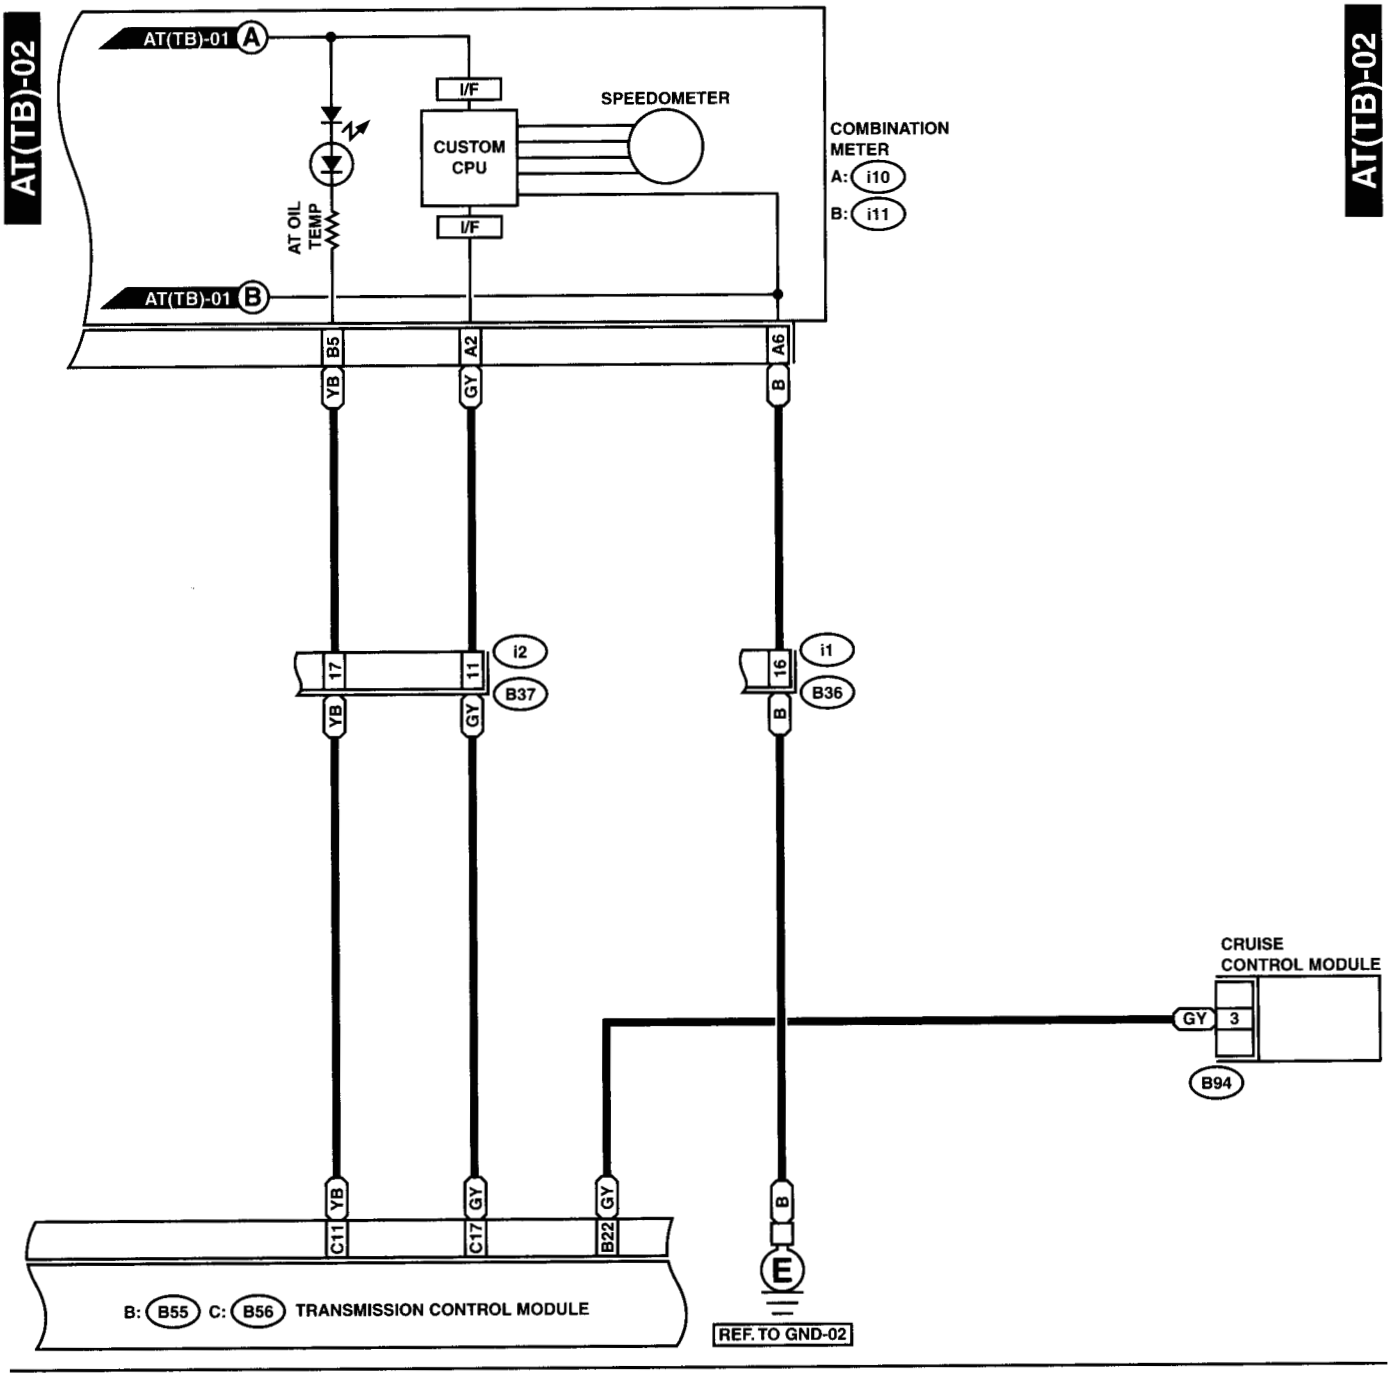


A: i10 (GREEN)




i1




B94 (BLACK)




i2 (BROWN)




B: B55 (GRAY)



C: B56 (GREEN)





B: i11 (GREEN)




GU41-20B


A/T CONTROL SYSTEM

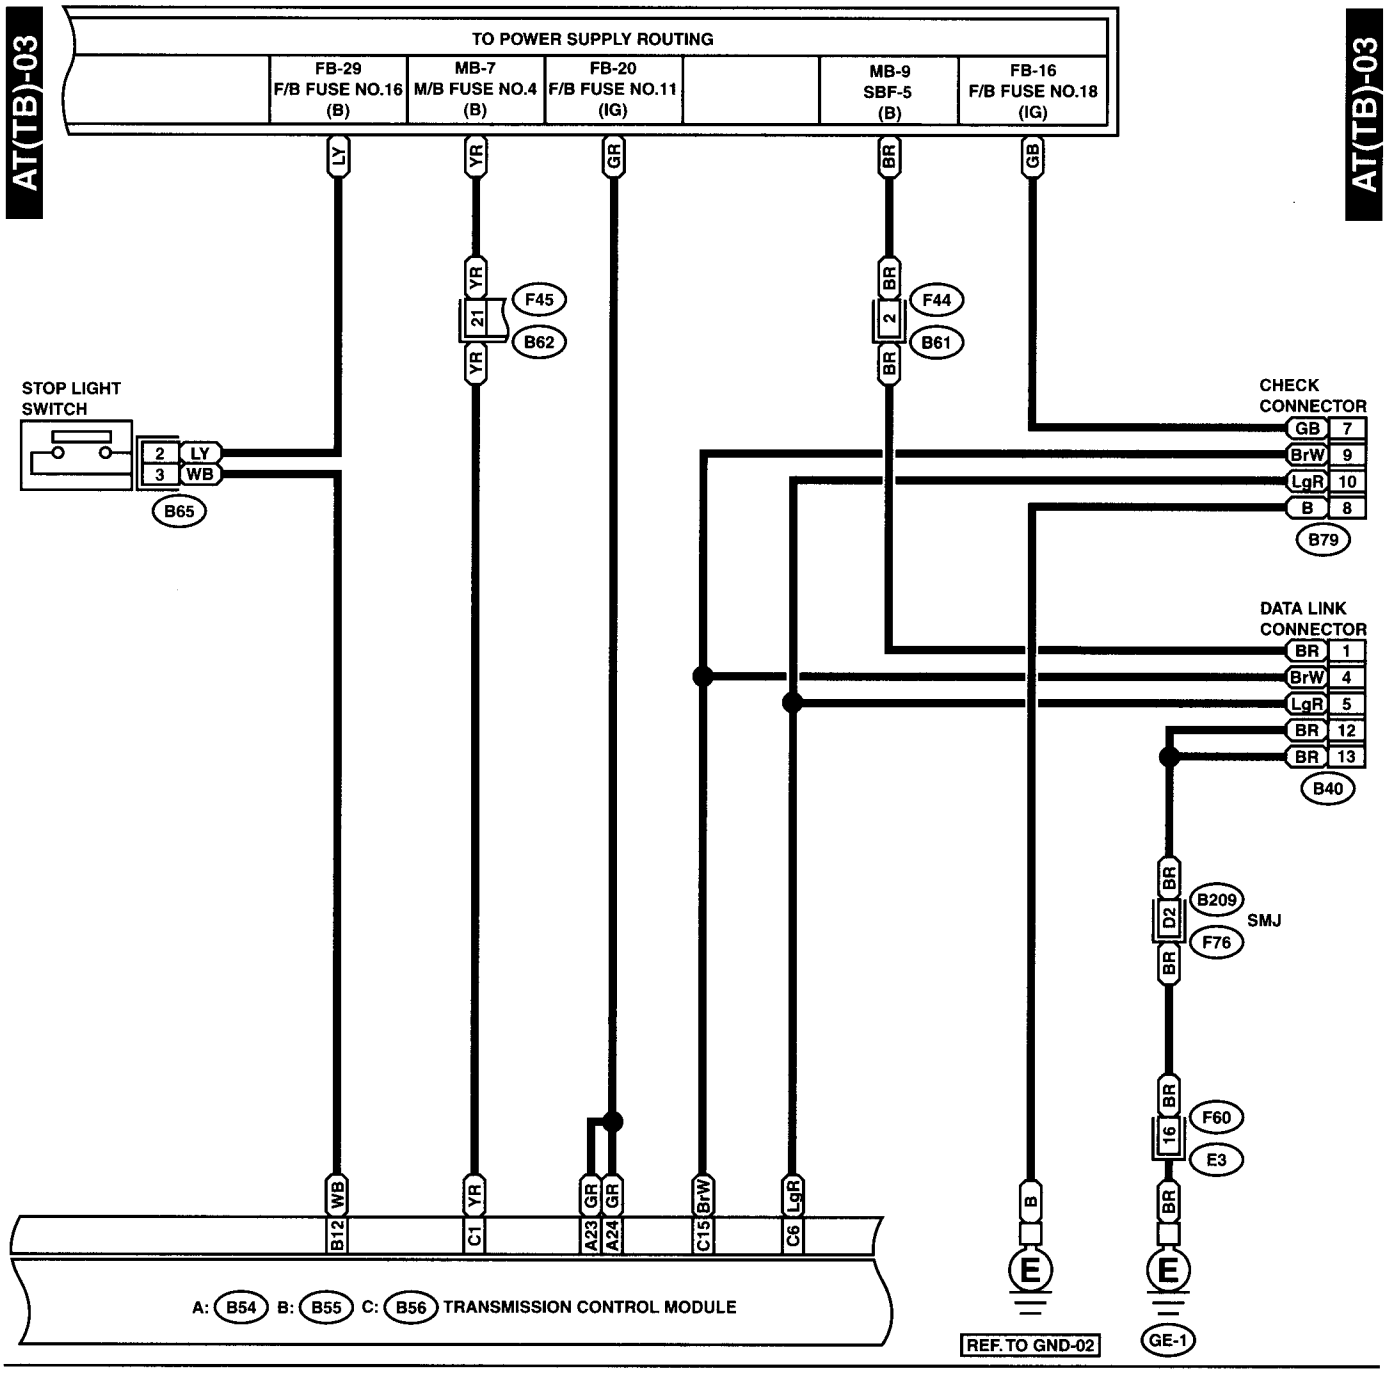

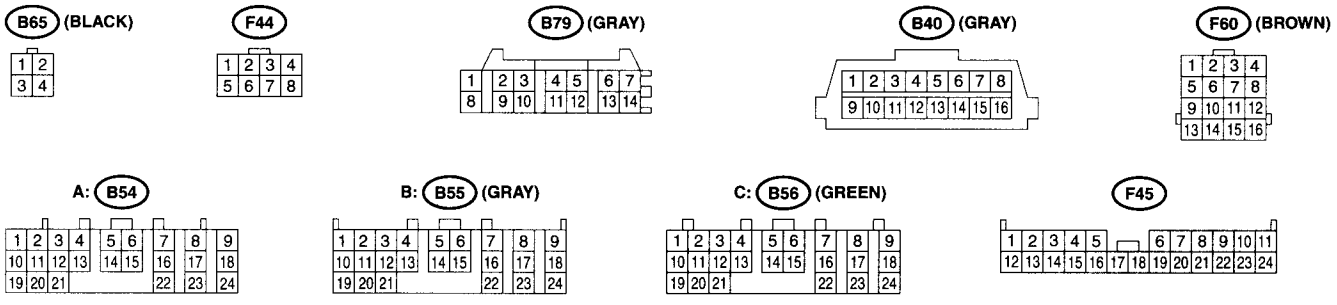



GU41-20C

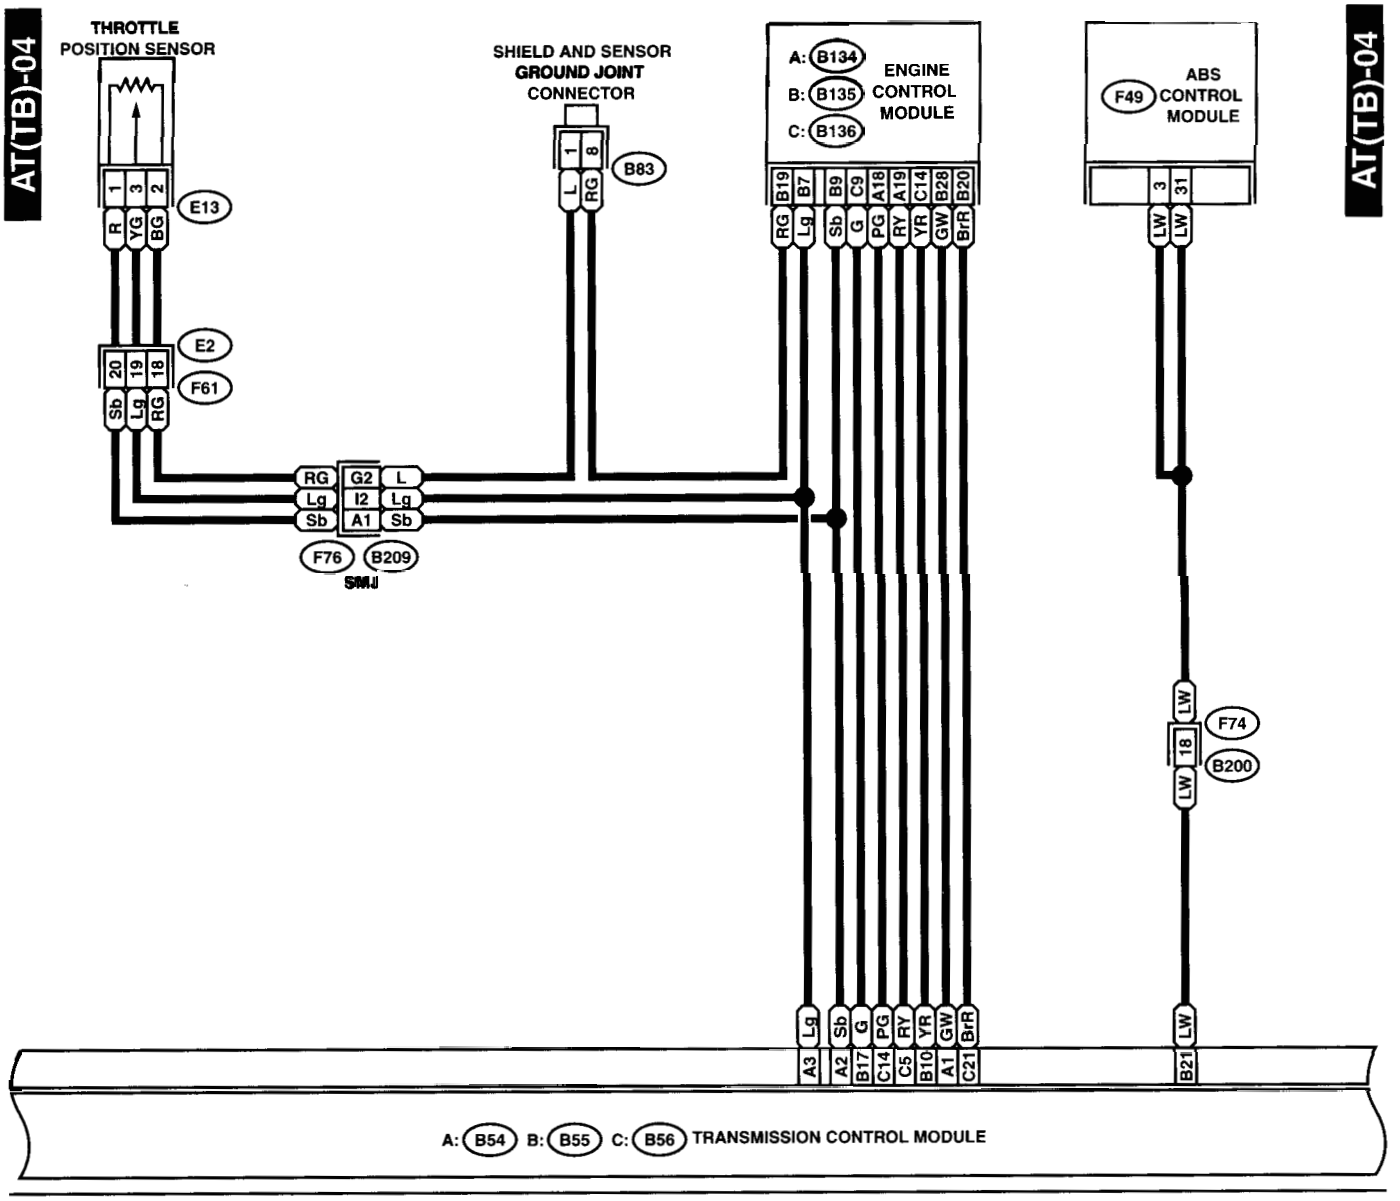
AT(TB)-04
THROTTLE POSITION SENSOR
E13
E2
F61
SHIELD AND SENSOR GROUND JOINT CONNECTOR
B83
A: B134
B: B135
C: B136
ENGINE CONTROL MODULE
F49
ABS CONTROL MODULE
F74
B200
F76
B209
SMJ
A: B54 B: B55 C: B56 TRANSMISSION CONTROL MODULE

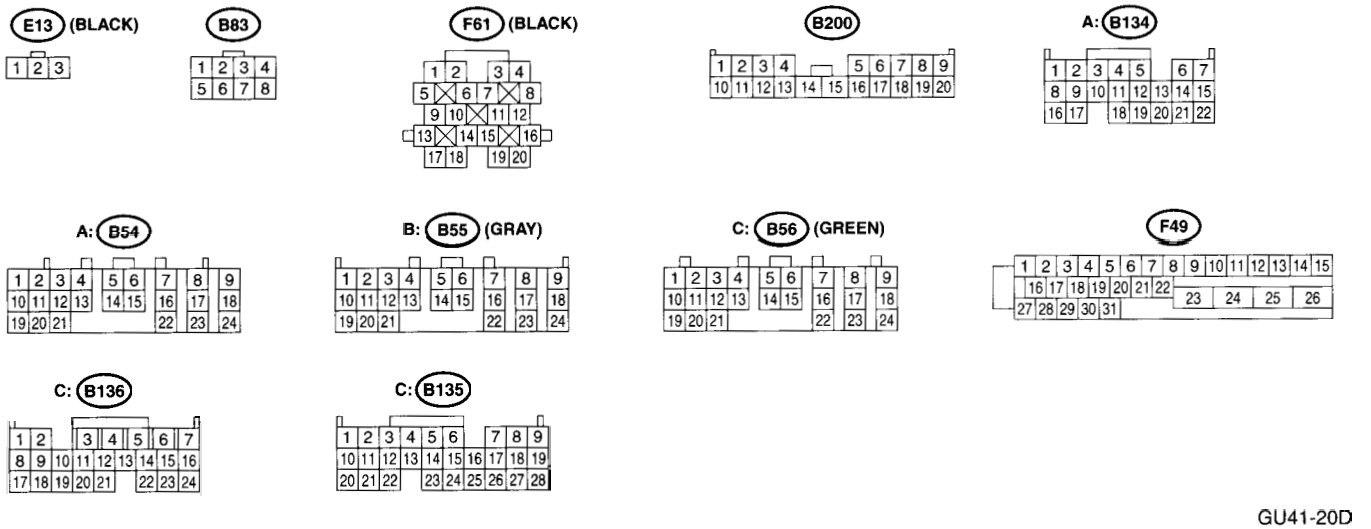
E13 (BLACK)
B83
F61 (BLACK)
B200
A: B134
A: B54
B: B55 (GRAY)
C: B56 (GREEN)
F49
C: B136
C: B135


GU41-20D

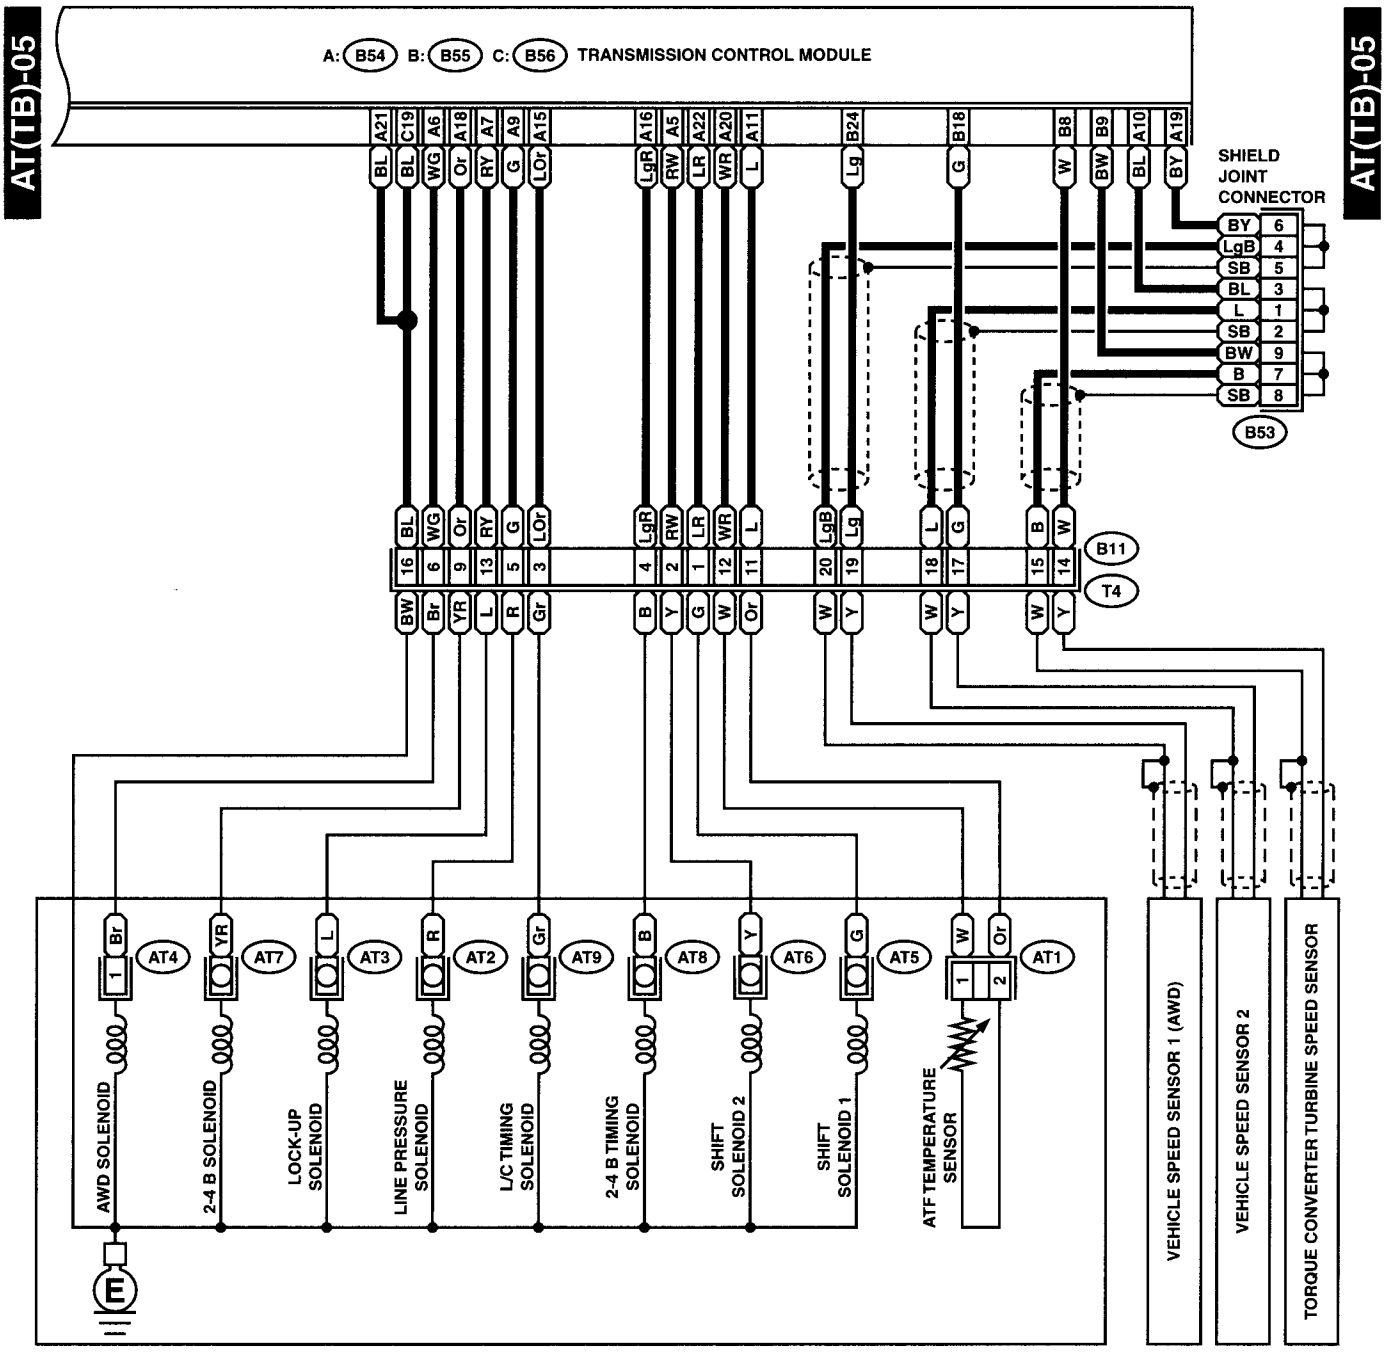

AT(TB)-05
AT(TB)-05
A: B54 B: B55 C: B56 TRANSMISSION CONTROL MODULE
A21 C19 A6 A18 A7 A9 A15 A16 A5 A22 A20 A11 B24 B18 B8 B9 A10 A19
BL BL WG Or RY G LOr LgR RW LR WR L Lg G W BW BL BY
SHIELD JOINT CONNECTOR
BY 6
LgB 4
SB 5
BL 3
L 1
SB 2
BW 9
B 7
SB 8
B53
BL WG Or RY G LOr LgR RW LR WR L LgB Lg L G B W
16 6 9 13 5 3 4 2 1 12 11 20 19 18 17 15 14
B11
T4
BW Br YR L R Gr B Y G W Or W Y W Y W Y
AT4 AT7 AT3 AT2 AT9 AT8 AT6 AT5 AT1
AWD SOLENOID
2-4 B SOLENOID
LOCK-UP SOLENOID
LINE PRESSURE SOLENOID
L/C TIMING SOLENOID
2-4 B TIMING SOLENOID
SHIFT SOLENOID 2
SHIFT SOLENOID 1
ATF TEMPERATURE SENSOR
VEHICLE SPEED SENSOR 1 (AWD)
VEHICLE SPEED SENSOR 2
TORQUE CONVERTER TURBINE SPEED SENSOR
E

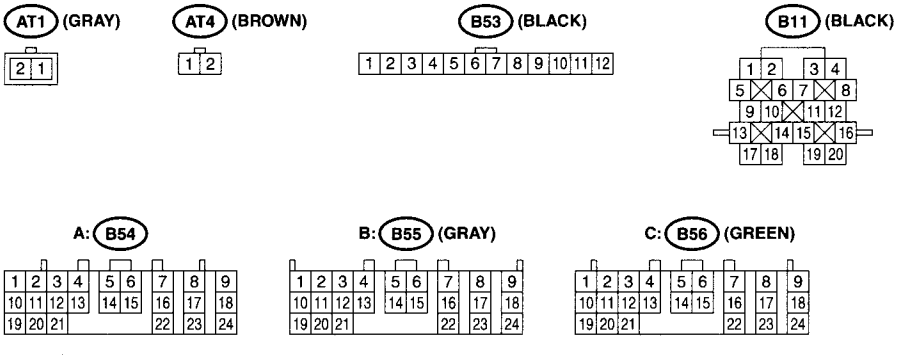
AT1 (GRAY)
AT4 (BROWN)
B53 (BLACK)
B11 (BLACK)
A: B54
B: B55 (GRAY)
C: B56 (GREEN)


GU41-20E

2. NON-TURBO ENGINE MODEL

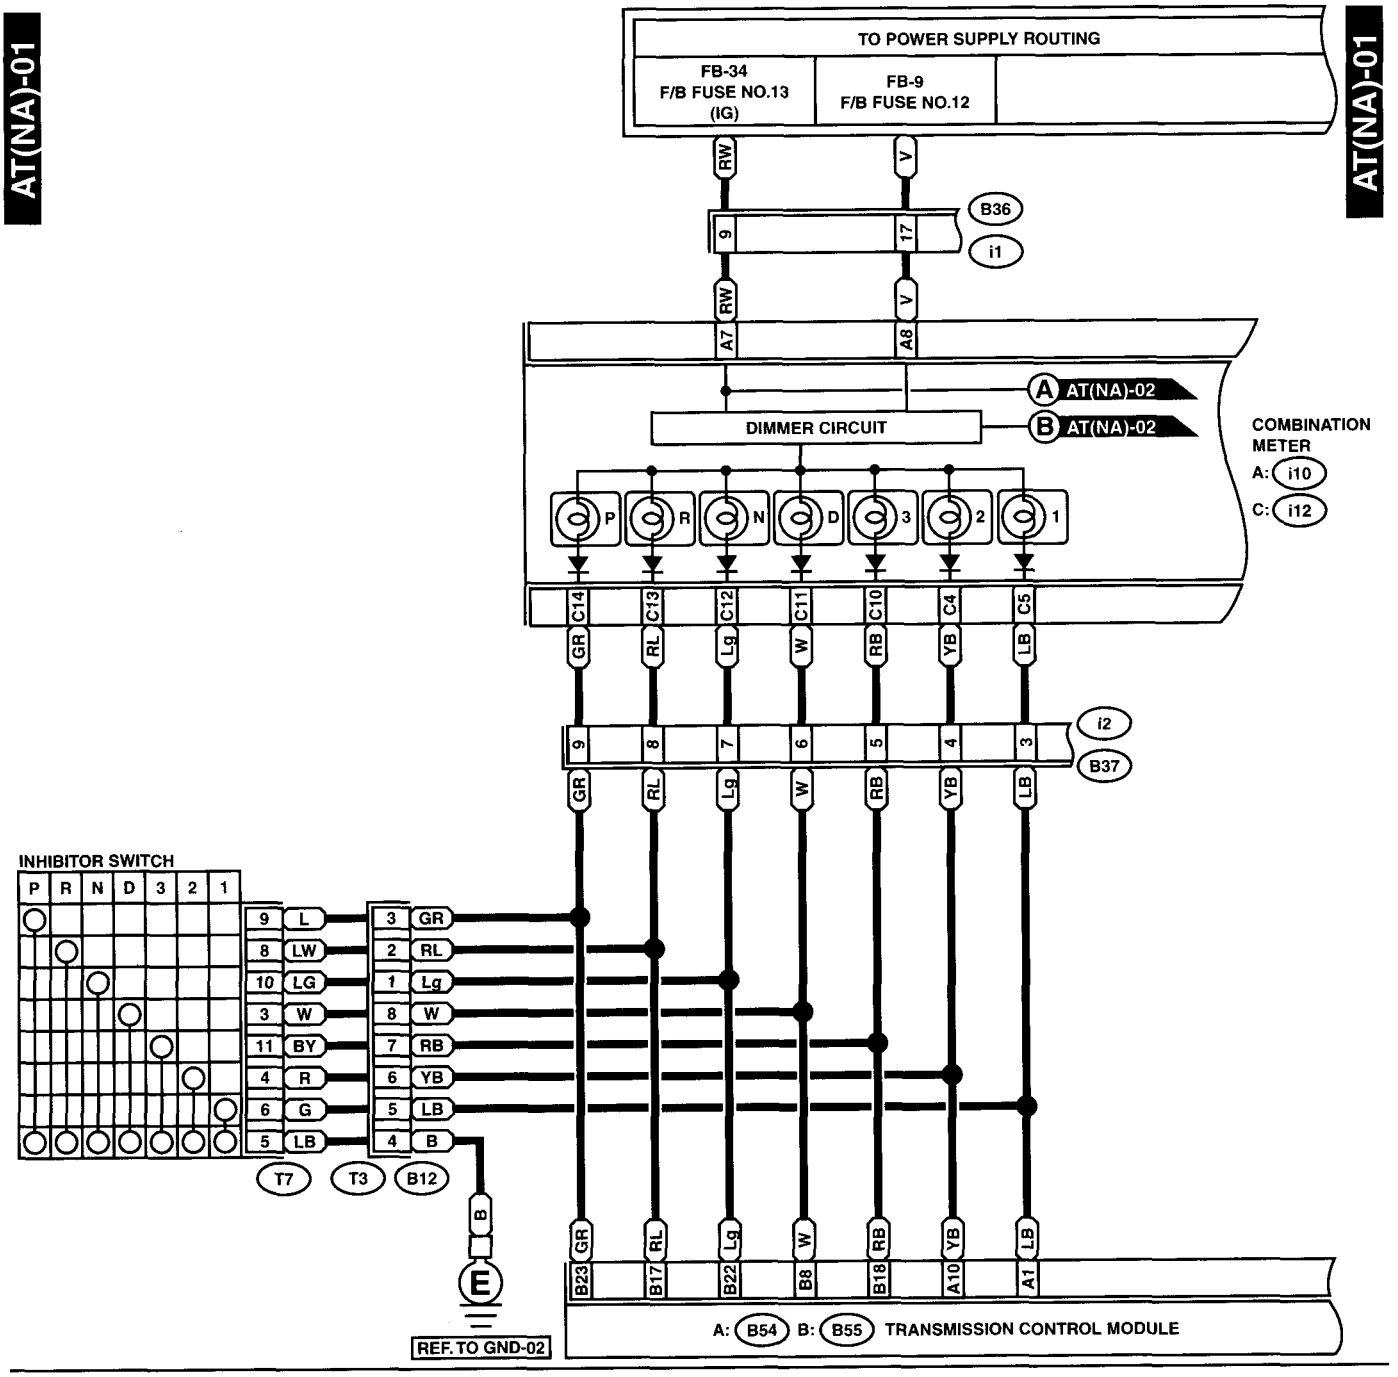


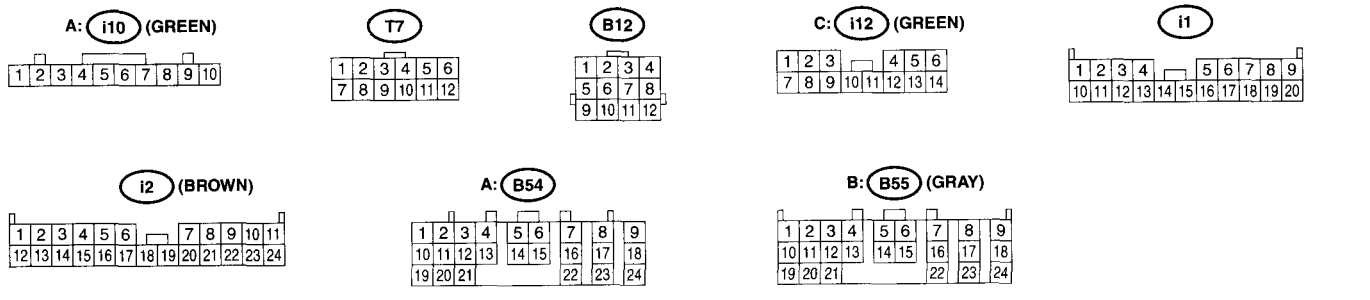


GU41-21A

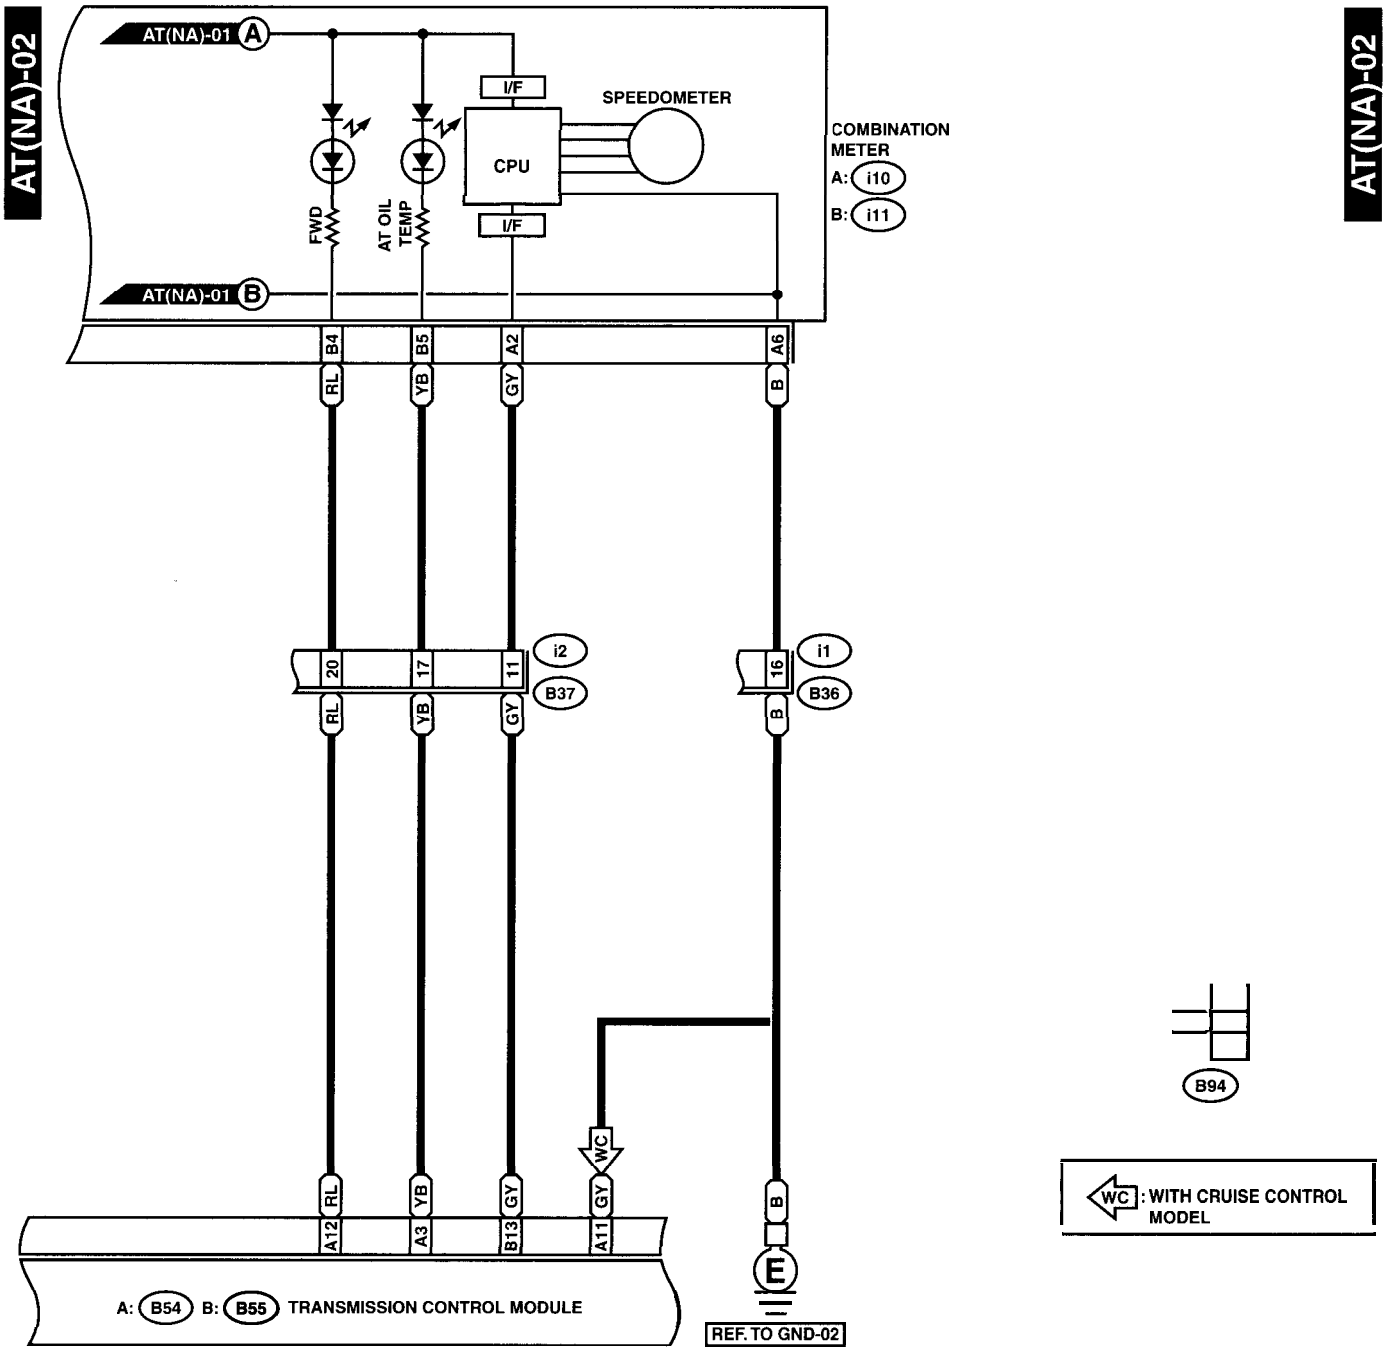


A: i10 (GREEN)




i1




B94 (BLACK)




i2 (BROWN)



A: B54



B: B55 (GRAY)





B: i11 (GREEN)



GU41-21B


AT(NA)-03

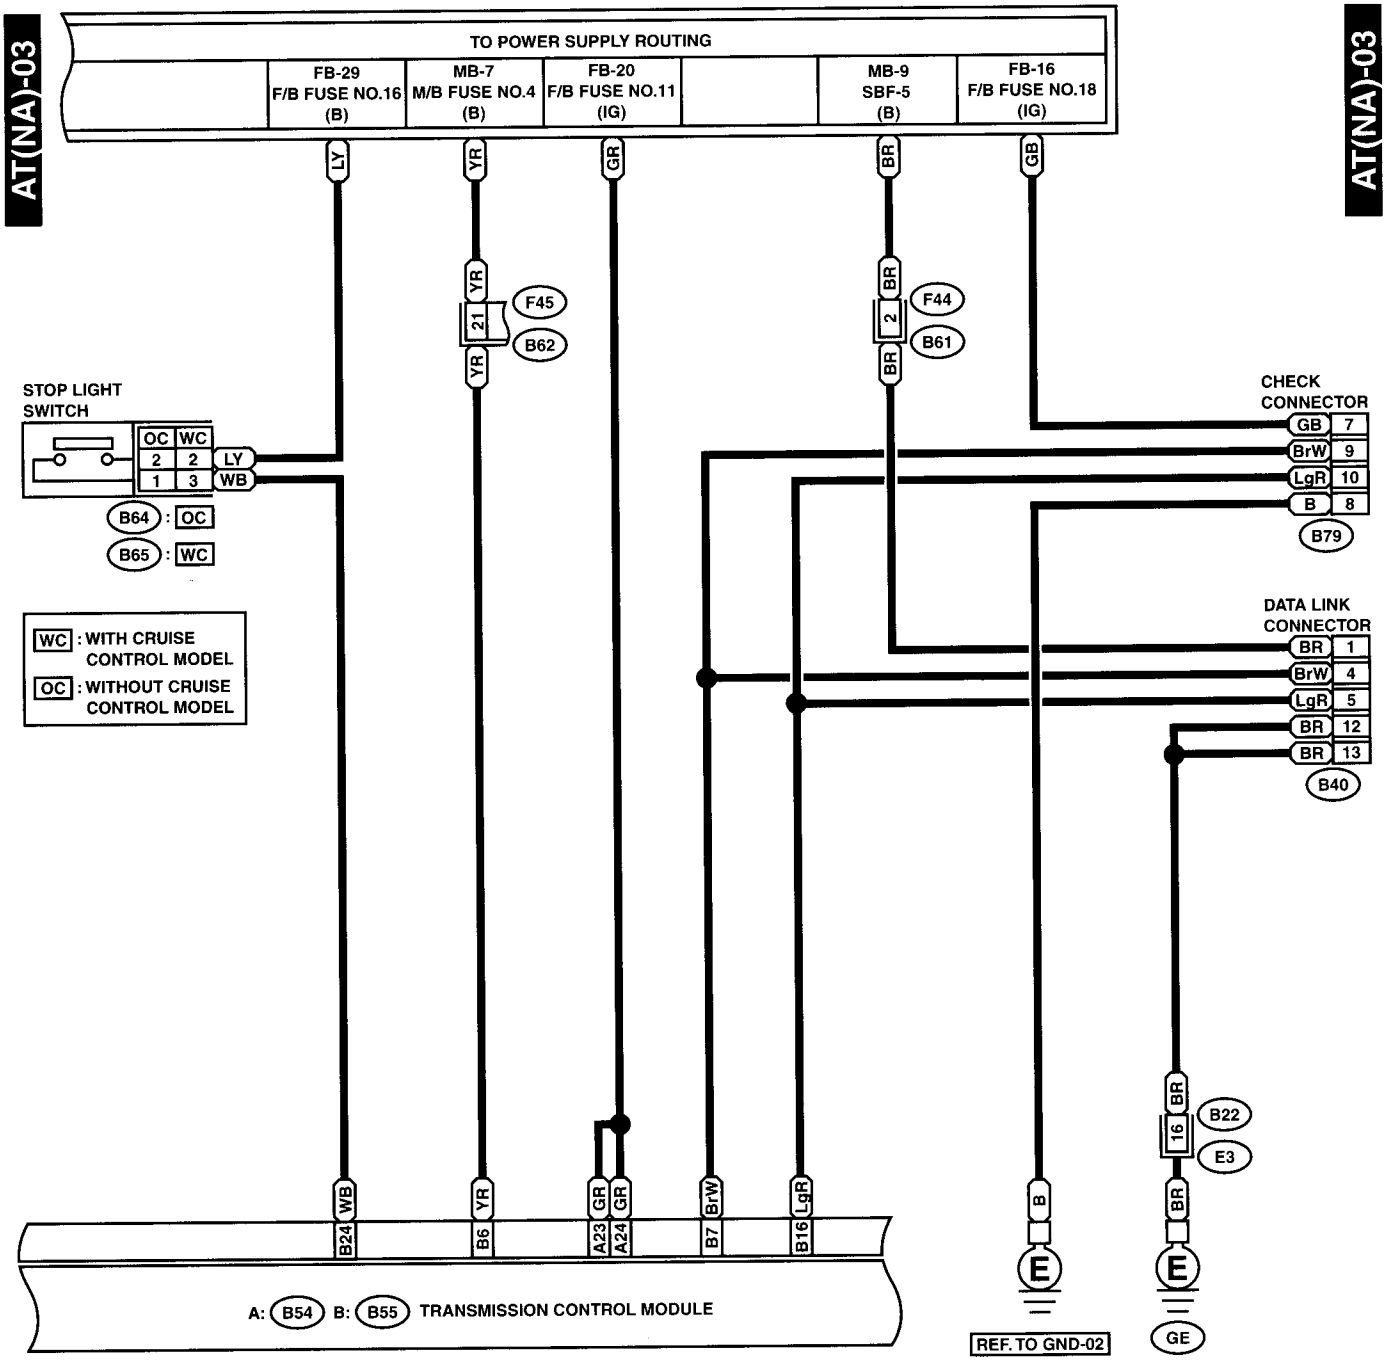


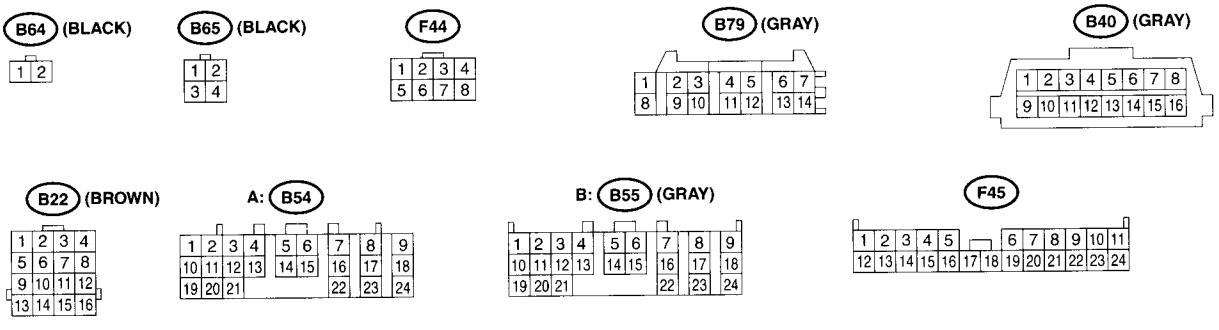


GU41-21C

AT(NA)-03

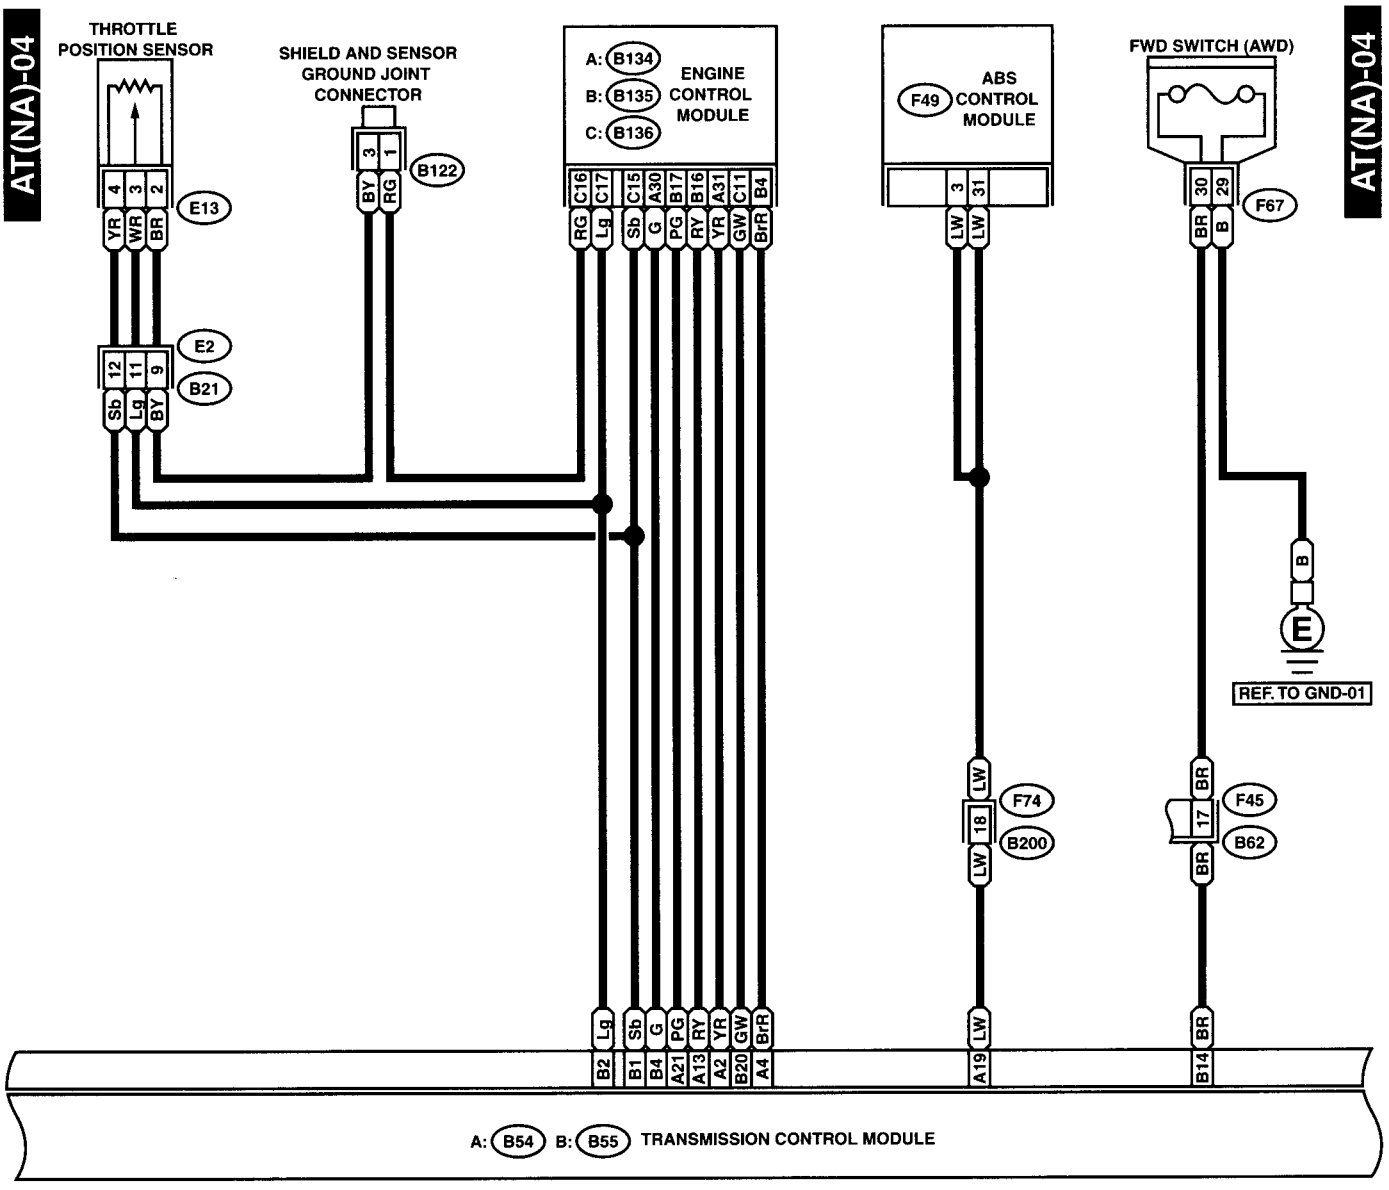
AT(NA)-04
THROTTLE POSITION SENSOR
SHIELD AND SENSOR GROUND JOINT CONNECTOR
A: B134
B: B135
C: B136
ENGINE CONTROL MODULE
F49
ABS CONTROL MODULE
FWD SWITCH (AWD)
AT(NA)-04
E13
B122
F67
E2
B21
REF. TO GND-01
F74
B200
F45
B62
A: B54 B: B55 TRANSMISSION CONTROL MODULE

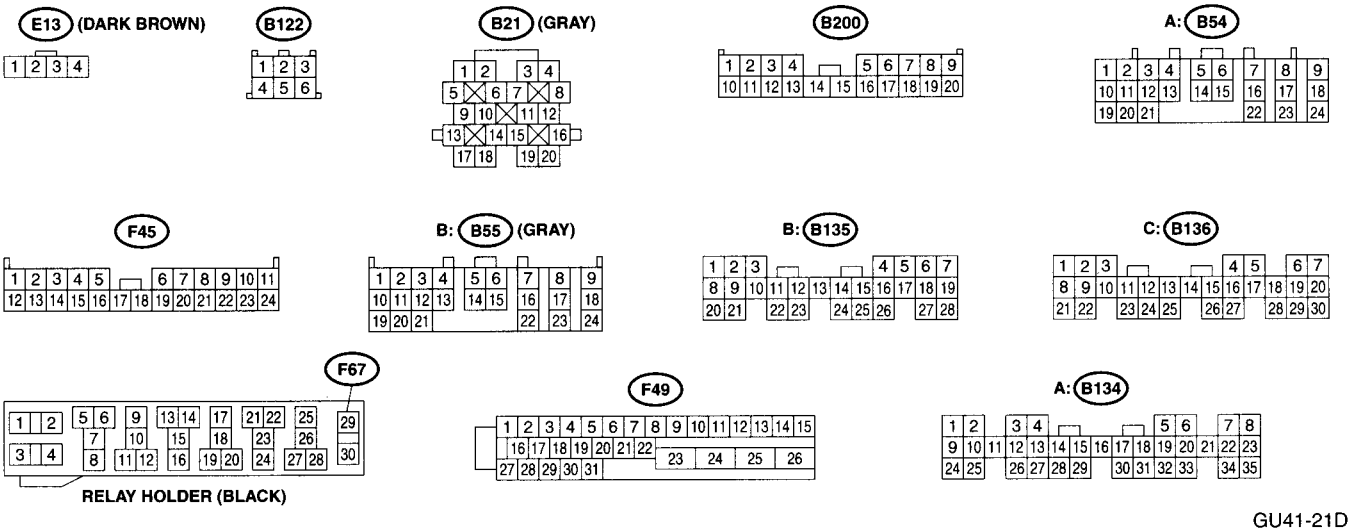
E13 (DARK BROWN)
B122
B21 (GRAY)
B200
A: B54
F45
B: B55 (GRAY)
B: B135
C: B136
F67
RELAY HOLDER (BLACK)
F49
A: B134

GU41-21D

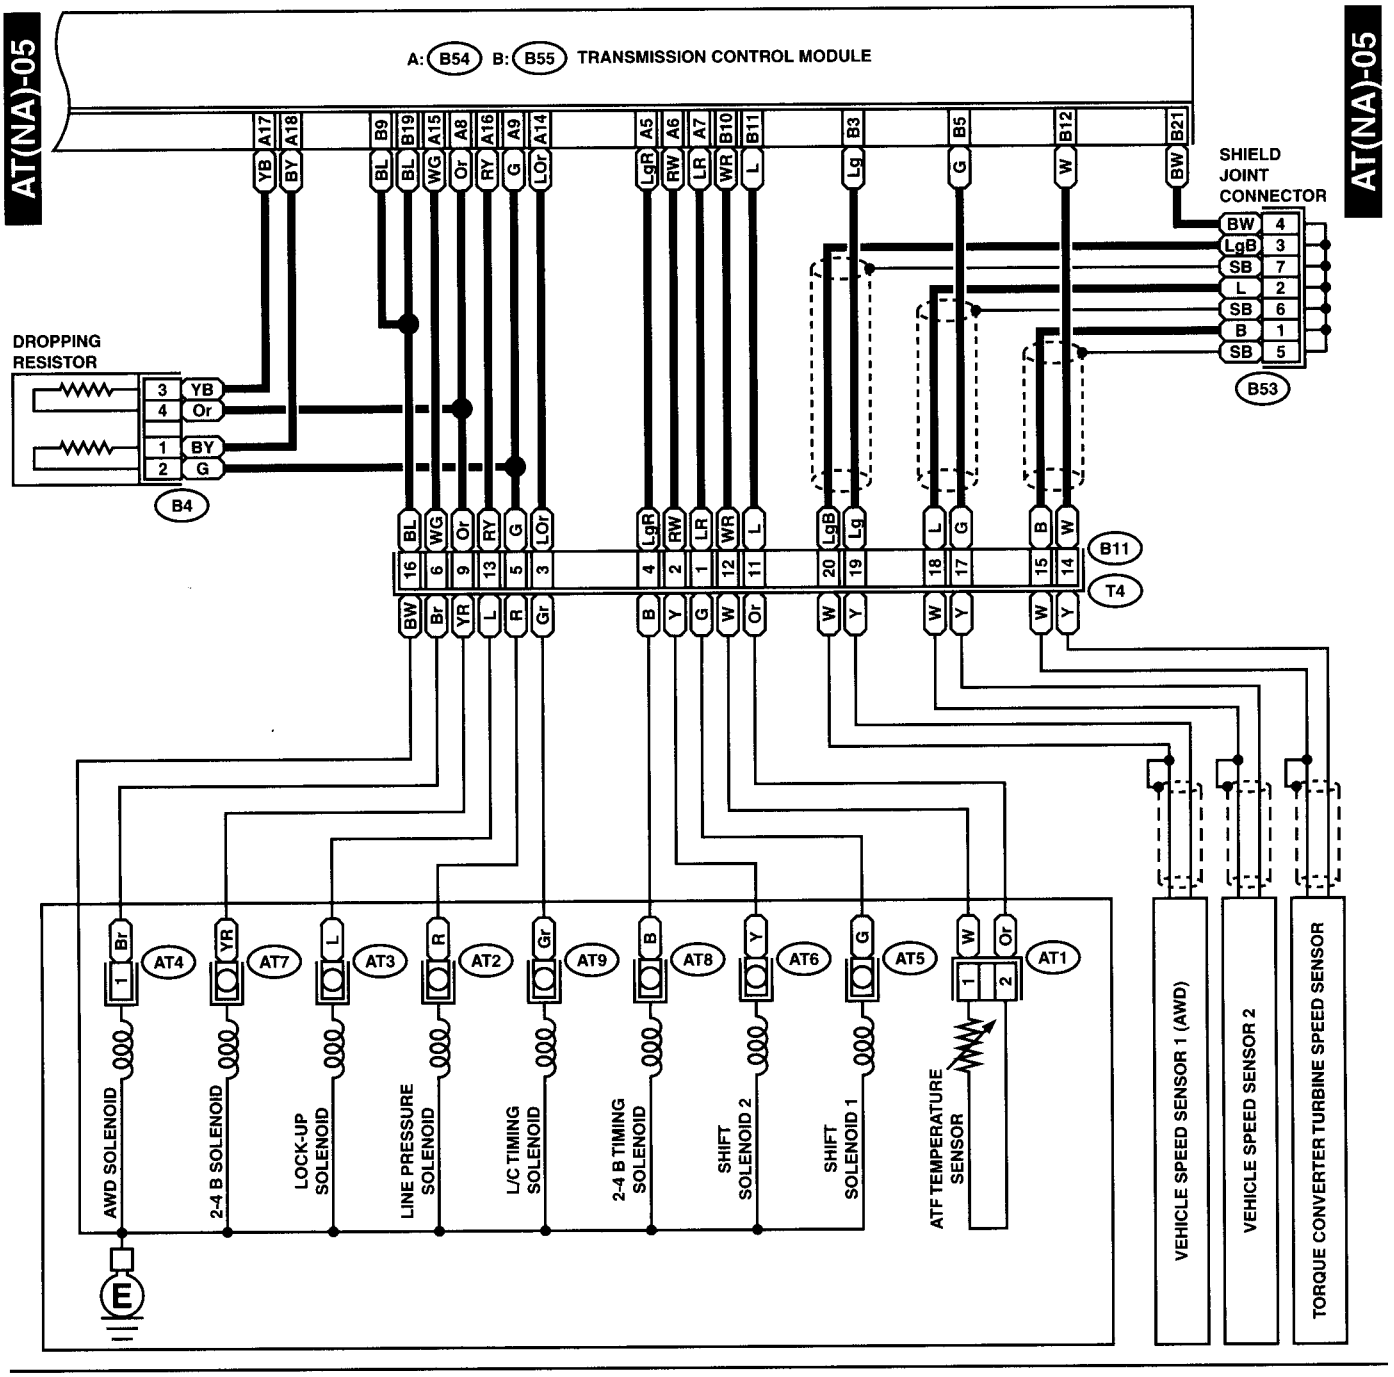
AT(NA)-05
A: B54 B: B55 TRANSMISSION CONTROL MODULE
A17 A18 B9 B19 A15 A8 A16 A9 A14 A5 A6 A7 B10 B11 B3 B5 B12 B21
YB BY BL BL WG Or RY G LOr LgR RW LR WR L Lg G W BW
SHIELD JOINT CONNECTOR
BW 4
LgB 3
SB 7
L 2
SB 6
B 1
SB 5
B53
DROPPING RESISTOR
3 YB
4 Or
1 BY
2 G
B4
BL WG Or RY G LOr LgR RW LR WR L LgB Lg L G B W
16 6 9 13 5 3 4 2 1 12 11 20 19 18 17 15 14
B11
T4
BW Br YR L R Gr B Y G W Or W Y W Y W Y
AT4 AT7 AT3 AT2 AT9 AT8 AT6 AT5 AT1
AWD SOLENOID
2-4 B SOLENOID
LOCK-UP SOLENOID
LINE PRESSURE SOLENOID
L/C TIMING SOLENOID
2-4 B TIMING SOLENOID
SHIFT SOLENOID 2
SHIFT SOLENOID 1
ATF TEMPERATURE SENSOR
VEHICLE SPEED SENSOR 1 (AWD)
VEHICLE SPEED SENSOR 2
TORQUE CONVERTER TURBINE SPEED SENSOR
AT1 (GRAY)
AT4 (BROWN)
B4 (GRAY)
B53
B11 (BLACK)
A: B54
B: B55 (GRAY)

GU41-21E