


Transmission Control Module (TCM) I/O Signal

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

5. Transmission Control Module (TCM) I/O Signal

A: ELECTRICAL SPECIFICATION

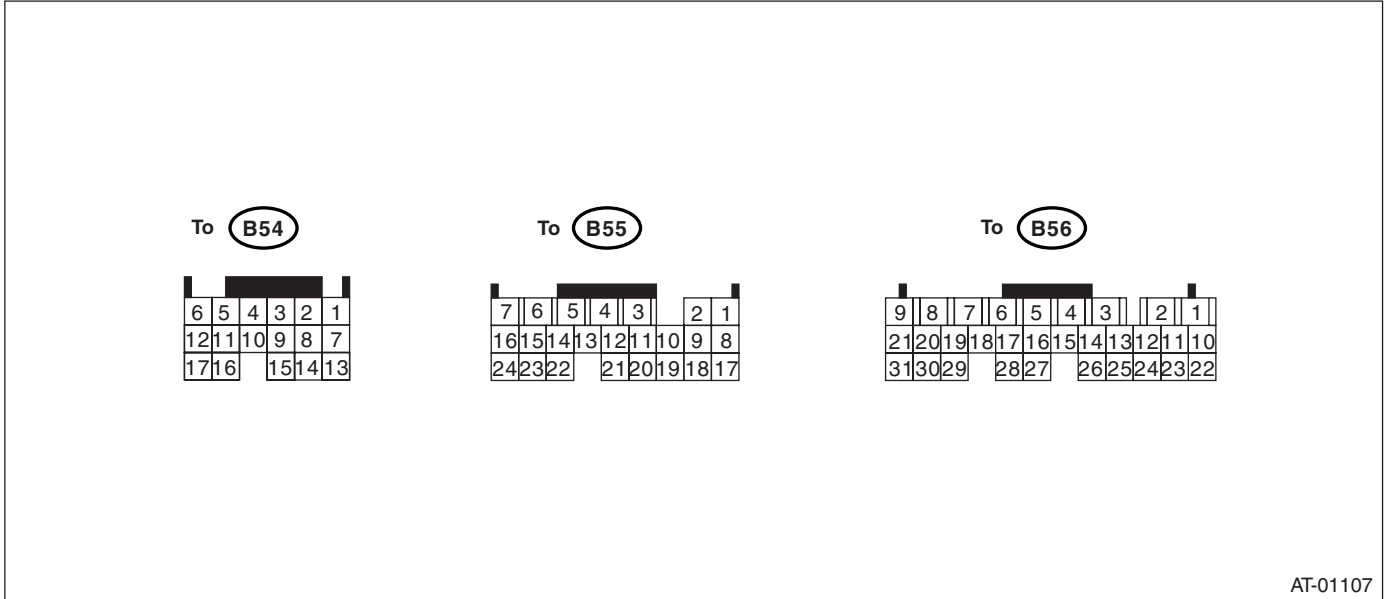

AT-01107

Check with ignition switch ON.						
Content	Connector No.	Terminal No.	Measuring conditions	Voltage (V)	Resistance to body (Ω)	
Back-up power supply	B56	27	Ignition switch OFF	10 — 13	—	
	B56	28				
	B56	29				
ACC power supply	B56	16	Ignition switch ACC	10 — 13	—	
Ignition power supply	B56	21	Ignition switch ON (with engine OFF)	10 — 13	—	
	B56	31				
Inhibitor switch	"P" range switch	B55	5	Select lever in "P" range	Less than 1	—
				Select lever in any other than "P" range (except "N" range)	More than 8	
	"N" range switch	B55	22	Select lever in "N" range	Less than 1	—
				Select lever in any other than "N" range	More than 8	
	"R" range switch	B55	14	Select lever in "R" range	Less than 1	—
				Select lever in any other than "R" range	More than 8	
	"D" range switch	B55	4	Select lever in "D" range	Less than 1	—
				Select lever in any other than "D" range	More than 8	
	"3" range switch	B54	16	Select lever in "3" range	Less than 1	—
				Select lever in any other than "3" range	More than 8	
	"2" range switch	B54	4	Select lever in "2" range	Less than 1	—
				Select lever in any other than "2" range	More than 8	
	"1" range switch	B54	10	Select lever in "1" range	Less than 1	—
				Select lever in any other than "1" range	More than 8	
Brake switch	B55	20	Brake pedal depressed.	More than 10.5	—	
			Brake pedal released.	Less than 1		

Transmission Control Module (TCM) I/O Signal

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

Check with ignition switch ON.					
Content	Connector No.	Terminal No.	Measuring conditions	Voltage (V)	Resistance to body (Ω)
Throttle position sensor	B55	19	Throttle fully closed.	More than 0.2	—
			Throttle fully open.	Less than 4.6	
Throttle position sensor power supply	B55	10	Ignition switch ON (with engine OFF)	Approx. 5	—
ATF temperature sensor	B55	21	ATF temperature 20°C (68°F)	3.5 — 4.3	2.3 k — 5.3 k
			ATF temperature 80°C (176°F)	1.0 — 2.2	300 — 800
Rear vehicle speed sensor	B55	24	Vehicle speed at least 20 km/h (12 MPH)	More than 2 (AC range)	—
Front vehicle speed sensor	B55	6	Vehicle stopped.	0	450 — 750
			Vehicle speed at least 20 km/h (12 MPH)	More than 1 (AC range)	
Torque converter turbine speed sensor	B55	7	Engine idling after warm-up. ("D" range)	0	450 — 750
			Engine idling after warm-up. ("N" range)	More than 1 (AC range)	
Vehicle speed output signal	B56	1	Vehicle speed at least 10 km/h (6 MPH)	Less than 1 ← → More than 4	—
Engine speed signal	B55	13	Ignition switch ON (with engine OFF)	Less than 1	—
			Ignition switch ON (with engine ON)	More than 5 (AC range)	
Line pressure linear solenoid	B56	20	Ignition switch ON (with engine OFF) Throttle fully closed after warm-up. ("R" range)	3.7 — 7.7	4.0 — 8.0
			Ignition switch ON (with engine OFF) Throttle fully open after warm-up. ("R" range)	1.1 — 5.1	
Lock-up duty solenoid	B56	5	When lock up occurs.	More than 10.5	2.0 — 4.5
			When lock up is released.	Less than 1	
Transfer duty solenoid	B56	4	"P" or "N" range	Less than 1	2.0 — 4.5
			Throttle fully open and with select lever in 1st gear.	More than 10.5	
2-4 brake duty solenoid	B56	6	"P" or "N" range	More than 10.5	2.0 — 4.5
			2nd or 4th gear	Less than 1	
High clutch duty solenoid	B56	8	3rd or 4th gear	Less than 1	2.0 — 4.5
			"P" or "N" range	More than 10.5	
Low clutch duty solenoid	B56	9	1st or 2nd gear	Less than 1	2.0 — 4.5
			"P" or "N" range	More than 10.5	
Low & reverse duty solenoid	B56	7	"P" or "N" range	More than 10.5	2.0 — 4.5
			"1" range	More than 5	
AT OIL TEMP warning light	B56	13	Light ON	Less than 1	—
			Light OFF	More than 9	
Front vehicle speed sensor ground	B55	15	—	0	Less than 1
Rear vehicle speed sensor ground	B55	23	—	0	Less than 1

Transmission Control Module (TCM) I/O Signal

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

Check with ignition switch ON.					
Content	Connector No.	Terminal No.	Measuring conditions	Voltage (V)	Resistance to body (Ω)
System ground line	B55	17	—	0	Less than 1
	B56	2			
	B56	3			
	B55	8			
Sensor ground line 3	B55	9	—	0	Less than 1
Sensor ground line 4	B56	19	—	0	Less than 1
Range lock signal	B56	18	"D" range 0 km/h (0 mile)	More than 10.5	—
			"D" range 20 km/h (12 MPH)	Less than 1	
Data link signal (Subaru Select Monitor)	B56	12	—	—	—
CAN communication signal (+)	B55	3	Ignition switch ON	Pulse signal	—
CAN communication signal (-)	B55	12	Ignition switch ON	Pulse signal	—
FWD switch (Except for model with VDC)	B56	17	Fuse removed	10.5 or more	—
			Fuse installed	1 or less	
AWD indicator light	B56	14	Ignition switch ON (engine OFF)	Less than 1	—
			Ignition switch ON (engine ON, FWD fuse removed)	9 or more	
Combination meter	B54	6	Ignition switch ON	Pulse signal	—